



## OPERATING AND SERVICE MANUAL

# 12539C

TIME BASE GENERATOR INTERFACE KIT

(FOR THE 2100 SERIES COMPUTERS)

Printed-Circuit Assembly:

12539-60003, Series 1232, 1315

# CONTENTS

Section	Page
<b>I GENERAL INFORMATION</b>	
1-1. Introduction .....	1-1
1-3. Description .....	1-1
1-5. Kit Contents .....	1-1
1-7. Identification .....	1-1
1-11. Specifications .....	1-1
<b>II INSTALLATION AND PROGRAMMING</b>	
2-1. Introduction .....	2-1
2-3. Unpacking and Inspection .....	2-1
2-5. Reshipment .....	2-1
2-9. Installation .....	2-1
2-12. Programming .....	2-1
2-13. Control Word .....	2-1
2-15. Error Check .....	2-1
2-18. Sample Program .....	2-2
<b>III THEORY OF OPERATION</b>	
3-1. Introduction .....	3-1
3-3. Functional Theory of Operation .....	3-1
3-8. Detailed Theory of Operation .....	3-1
3-12. Power-On Logic .....	3-1
3-14. Time Standard Logic .....	3-1
3-17. Time Base Selection Logic .....	3-1
3-22. Control Logic .....	3-2
3-26. Flag Logic .....	3-2
3-36. Error Check Logic .....	3-6
<b>IV MAINTENANCE</b>	
4-1. Introduction .....	4-1
4-3. Preventive Maintenance .....	4-1
4-5. Troubleshooting .....	4-1
4-9. Oscillator Adjustment .....	4-1
<b>V REPLACEABLE PARTS</b>	
5-1. Introduction .....	5-1
5-5. Ordering Information .....	5-1

## ILLUSTRATIONS

Figure	Title	Page
1-1.	HP 12539C Time Base Generator Interface Kit .....	1-1
3-1.	Time Base Generator Simplified Logic Diagram and Functional Operation Flowchart .....	3-3
3-2.	Skip-On-Flag Signal Generation Flowchart .....	3-5
3-3.	Interrupt Operation Flowchart .....	3-5
4-1.	Integrated Circuit Pin Connections .....	4-2
4-2.	Time Base Generator PCA Parts Location and Logic Diagrams .....	4-5

## TABLES

Table	Title	Page
1-1.	Time Base Generator Specifications .....	1-1
2-1.	Control Word Combinations and Time Intervals .....	2-2
2-2.	Sample Program .....	2-2
4-1.	Time Base Generator PCA Replaceable Parts .....	4-3
5-1.	Numerical List of Replaceable Parts .....	5-2
5-2.	Code List of Manufacturers .....	5-2
5-3.	Reference Designations and Abbreviations .....	5-3



# GENERAL INFORMATION

## 1-1. INTRODUCTION.

1-2. This manual provides general information, installation and programming instructions, theory of operation, maintenance instructions, and replaceable parts information for the Hewlett-Packard 12539C Time Base Generator Interface Kit (figure 1-1).

## 1-3. DESCRIPTION.

1-4. The HP 12539C Time Base Generator measures real-time intervals in decade steps from 0.1 millisecond to 1000 seconds (16.67 minutes). A three-bit control word transferred to the time base generator by programmed instruction selects the time interval to be measured. The 1-MHz crystal-controlled oscillator used as the frequency standard for the time base generator allows generation of timing signals accurate to within 2 seconds per 24-hour day.

## 1-5. KIT CONTENTS.

1-6. The time base generator interface kit consists of a time base generator printed-circuit assembly, part no. 12539-60003, and the operating and service manual, part no. 12539-60008.

## 1-7. IDENTIFICATION.

1-8. This operating and service manual is identified on the title page by interface kit designation and nomenclature, printed-circuit assembly part number and series code, manual part number, and publication date. Refer to

the information presented in the following paragraphs and ensure that this manual applies to the equipment being serviced.

1-9. Hewlett-Packard uses five digits and a letter (00000A) for standard interface kit designation. If the designation of your kit does not agree with that on the title page of this manual, there are differences between your kit and the kit described in this manual. The appropriate manual or manual supplement is available at the nearest HP Sales and Service Office listed at the back of this manual.

1-10. Printed-circuit assembly (PCA) revisions are identified by a letter, a series code, and a division code stamped on the board (e.g., A-1232-22). The letter code identifies the version of the etched trace pattern on the unloaded board. The series code (four middle digits) refers to the electrical characteristics of the loaded assembly and the positions of the components. The division code (last two digits) identifies the Hewlett-Packard division which manufactured the PCA. If the series code stamped on the PCA does not agree with the series code shown on the title page of this manual, there are differences between your PCA and the PCA described in this manual. These differences are described in change sheets and manual supplements available at the nearest HP Sales and Service Office.

## 1-11. SPECIFICATIONS.

1-12. Table 1-1 lists the specifications for the HP 12539C Time Base Generator Interface PCA.

Table 1-1. Time Base Generator Specifications

CHARACTERISTICS	SPECIFICATIONS
Time Base Intervals:	0.1 millisecond 1 millisecond 10 milliseconds 100 milliseconds 1 second 10 seconds 100 seconds 1000 seconds
Time Base Accuracy:	2 seconds per 24-hour day
Current Requirements from Computer Power Supply:	
-2V	0.016A
+4.85V	0.75A
Logic Levels	
Logic 1 (high):	+2.4 or greater
Logic 0 (low):	+0.4V or less

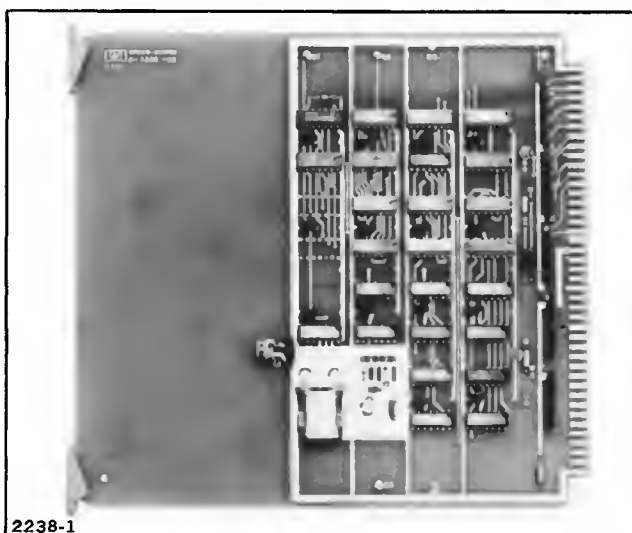


Figure 1-1. HP 12539C Time Base Generator Interface Kit



# INSTALLATION AND PROGRAMMING

## 2-1. INTRODUCTION.

2-2. This section provides information for unpacking and inspection, reshipment, installation, and programming the HP 12539C Time Base Generator Interface Kit.

## 2-3. UNPACKING AND INSPECTION.

2-4. If the shipping carton is damaged upon receipt, request that the carrier's agent be present when the card is unpacked. Inspect the PCA for damage (cracks, broken components, etc.). If the PCA is damaged and fails to meet specifications, notify the carrier and the nearest HP Sales and Service Office immediately. (Sales and Service Offices are listed at the back of this manual.) Retain the shipping container and the packing material for the carrier's inspection. The HP Sales and Service Office will arrange for repair or replacement of the damaged PCA without waiting for claims against the carrier to be settled.

## 2-5. RESHIPMENT.

2-6. If an item of the kit is to be shipped to Hewlett-Packard for service or repair, attach a tag to the item identifying the owner and indicating the service or repair to be accomplished. Include the model number of the kit.

2-7. Pack the item in the original factory packing material if available. If the original material is not available, standard factory packing material can be obtained from the nearest Hewlett-Packard Sales and Service Office.

2-8. If standard packing material is not used, wrap the item in Air Cap TH-240 cushioning (manufactured by Sealed Air Corporation, Hawthorn, N.J.) or equivalent and place in a corrugated carton (200 pound test material). Seal the shipping carton securely and mark it "FRAGILE" to ensure careful handling.

Note: In any correspondence, identify the kit by number. Refer any questions to the nearest Hewlett-Packard Sales and Service Office.

## 2-9. INSTALLATION.

2-10. The time base generator PCA obtains its operating currents from the computer power supply. Before installing the PCA, determine the current requirements of this PCA in combination with all other interface or accessory kits already installed in the computer. The computer system documentation defines the currents available from the com-

puter and describes the procedures for calculating the total power supply current requirements. If the total current requirements exceed the limitations of the computer power supply, a Hewlett-Packard power supply extender unit or input/output extender unit must be used. See table 1-1 for the current requirements of the time base generator PCA.

2-11. After ensuring sufficient power, install the time base generator PCA as follows:

- a. Turn power off at the computer.
- b. Insert the time base generator PCA in the computer I/O slot corresponding to the desired select code.
- c. Turn on power and perform the diagnostic test, manual part no. 12539-90011, to verify proper operation of the time base generator PCA.
- d. Check the oscillator output frequency at test point E4 using a Hewlett-Packard 5244L Electronic Counter or equivalent. The frequency should be  $1\text{-MHz} \pm 0.5\text{ Hz}$ . If the frequency is not within tolerance, adjust the frequency according to the oscillator adjustment procedures given in paragraph 4-10.

## 2-12. PROGRAMMING.

### 2-13. CONTROL WORD.

2-14. The desired time interval to be measured by the time base generator is selected by transferring a three-bit control word from the computer A- or B-register to the time base generator. Table 2-1 lists the possible control word bit combinations and the time interval selected by each. Note that the time intervals are selected in increments equal to  $10^{n-1}$  milliseconds where  $n$  is the decimal equivalent of the three-bit control word. For non-decade time intervals a decade interval must be counted by software to form the desired interval. For example, if a time interval of three milliseconds is desired, a one millisecond interval must be counted by software three times, to obtain the desired interval.

### 2-15. ERROR CHECK.

2-16. When more than one decade time interval is required for any given timing operation, the time base generator provides a means of ensuring that all selected intervals have been acknowledged by the computer. A status word, transferred from the time base generator to the computer A- or B-register by an LIA or LIB instruction, contains a single significant bit (bit 4). If this bit is a logic 1, at least

one time interval has been lost. This status word should be checked by software after each decade time interval.

2-17. Jumper W1 on the PCA can be placed in position B to make bit 5 significant also. In this way, bit 5 can be checked by software to determine if a time interval has been lost.

#### 2-18. SAMPLE PROGRAM.

2-19. Table 2-2 is a sample program demonstrating the operation of the time base generator. Under control of this program, the time base generator will provide a measured time interval of 5 seconds. This is done by counting five 1-second intervals with a software counter. After each 1-second interval, the error status bit is checked to ensure that all of the 1-second intervals are acknowledged by the computer.

Table 2-1. Control Word Combinations and Time Intervals

CONTROL WORD			SELECTED TIME INTERVAL
BIT 2	BIT 1	BIT 0	
0	0	0	0.1 millisecond
0	0	1	1 millisecond
0	1	0	10 milliseconds
0	1	1	100 milliseconds
1	0	0	1 second
1	0	1	10 seconds
1	1	0	100 seconds
1	1	1	1000 seconds

NOTE: Bits 3 through 15 not used.

Table 2-2. Sample Program

0001	ASMB,A,B,L,T					
0002*						
0003*	THIS IS A SAMPLE PROGRAM TO DEMONSTRATE THE OPERATION OF THE					
0004*	TIME BASE GENERATOR. UNDER CONTROL OF THIS PROGRAM, THE TIME					
0005*	BASE GENERATOR WILL PROVIDE A MEASURED INTERVAL OF FIVE SECONDS.					
0006*	THIS REQUIRES THAT FIVE DECADE INTERVALS OF ONE SECOND EACH					
0007*	BE MEASURED AND COUNTED BY SOFTWARE. AFTER EACH DECADE INTERVAL					
0008*	IS MEASURED, THE ERROR STATUS IS CHECKED AND IF AN ERROR IS					
0009*	DETECTED, THE COMPUTER HALTS WITH A T-REGISTER DISPLAY OF					
0010*	102066 OCTAL.					
0011*						
0012	00100		ORG	100B		
0013*						
0014	00100	000000	START	NOP		
0015	00101	060121		LDA	.5	INITIALIZE COUNTER TO COUNT
0016	00102	070122		STA	COUNT	FIVE DECADE INTERVALS.
0017*						
0018*	THIS PART OF THE PROGRAM OPERATES THE TIME BASE GENERATOR.					
0019*						
0020	00103	060123		LDA	CW	GET CONTROL WORD AND TRANSFER
0021	00104	102615		OTA	TBG	TO TIME BASE GENERATOR.
0022	00105	102715		STC	TBG	START TIME BASE GENERATOR
0023	00106	103115	GO	CLF	TBG	ENABLE FLAG LOGIC.
0024	00107	102315		SFS	TBG	HAS DECADE INTERVAL ELAPSED?
0025	00110	024107		JMP	*-1	NO. WAIT.
0026	00111	024112		JMP	STAT	YES. CHECK ERROR STATUS.
0027*						
0028*	THIS PART OF THE PROGRAM CHECKS ERROR STATUS AND INCREMENTS					
0029*	THE DECADE INTERVAL COUNTER.					
0030*						
0031	00112	102515	STAT	LIA	TBG	GET STATUS WORD FROM TIME BASE
0032*	GENERATOR					
0033	00113	050124		CPA	ERR	DOES STATUS WORD INDICATE AN ERROR?
0034	00114	102066		HLT	66B	YES. HALT COMPUTER.
0035	00115	034122		ISZ	COUNT	NO. INCREMENT COUNTER. IS TIME
0036*	INTERVAL COMPLETE?					
0037	00116	024106		JMP	GO	NO. START ANOTHER DECADE INTERVAL.
0038	00117	106715		CLC	TBG	YES. STOP DECADE COUNTERS.
0039	00120	102077		HLT	77B	HALT COMPUTER.
0040*						
0041*	CONSTANT AND STORAGE INFORMATION.					
0042*						
0043	00121	177773	.5	DEC	-5	
0044	00122	000000	COUNT	BSS	1	
0045	00123	000004	CW	OCT	4	
0046	00124	000020	ERR	OCT	20	
0047	00015		TBG	EQU	158	
0048*						
0049						
**	NO ERRORS*					
			END	START		



### 3-1. INTRODUCTION.

3-2. This section provides functional and detailed theory of operation for the HP 12539C Time Base Generator Interface Kit.

### 3-3. FUNCTIONAL THEORY OF OPERATION.

3-4. Figure 3-1 is a block diagram of the time base generator PCA and a flowchart showing the functional operation of the time base generator PCA. The program instructions shown in the flowchart are the same as those used in the sample program in table 2-2 in section II of this manual.

3-5. Operation of the time base generator begins with the transfer of a three-bit control word from the computer A- or B-register to the time base selection register with an OTA or OTB instruction. The next instruction (STC,C) causes a shaped 100-kHz signal to be gated to the decade divider circuits. This marks the beginning of the time interval.

3-6. An SFS instruction is used to determine if the selected time interval has elapsed. Before the time interval has elapsed, a JMP \*-1 instruction is executed followed by the SFS instruction again. This wait loop continues until the selected time interval has elapsed.

3-7. At the end of the selected time interval, the time base generator supplies an SKF signal. The SKF signal causes the computer to skip the JMP \*-1 instruction and proceed with the program. The time spent in the wait loop is the time selected by the control word that was initially transferred to the time base generator.

### 3-8. DETAILED THEORY OF OPERATION.

3-9. Refer to the time base generator logic diagram, figure 4-2, in section IV of this manual while reading the detailed theory of operation discussion.

3-10. For an index of signals on the 86-pin edge of the time base generator PCA, refer to the computer system documentation.

3-11. All logic levels on the time base generator PCA are positive-true. The term "high" refers to a level of approximately +2.4V and "low" refers to approximately +0.4V. These signal levels vary somewhat depending on the integrated circuit package involved.

### 3-12. POWER-ON LOGIC.

3-13. When power is initially applied to the computer or the computer PRESET switch is pressed, the computer supplies a POPIO and a CRS signal to the time base generator PCA. The POPIO signal sets the Flag Buffer FF and the CRS signal clears the Control FF. An ENF signal at the next computer time T2 is gated with the set-side output of the Flag Buffer FF to set the Flag FF. The low set-side output of the Control FF is applied through U34D to the clear inputs of the decade dividers ensuring that they are initially in the clear state. The low set-side output of the Control FF also inhibits "and" gate U24D to prevent the 100-kHz signal from clocking the decade dividers. Also, the first ENF signal clears the IRQ FF. Because the output of the eight-to-one multiplexer circuit is low, the Time Flag FF clears when the first SIR signal is received at computer time T5.

### 3-14. TIME STANDARD LOGIC.

3-15. The basic component of the time standard logic is a 1-MHz crystal oscillator accurate to 20 ppm (parts per million). The 1-MHz signal is applied to decade divider U75 to obtain a 100-kHz signal. "And" gate U24D allows the control logic to control the application of this 100-kHz signal to the decade dividers as described in paragraph 3-24.

3-16. The gated 100-kHz signal is applied to the first of the eight decade dividers. The decade dividers are wired externally to operate as binary coded decimal counters with a count added each time the input signal (pin 14) swings low. The output signal (pin 11) swings high on the eighth count then low on the tenth count. The low swing adds one count to the next divider stage. The output signals from each of the decade dividers are applied to the time base selection logic.

### 3-17. TIME BASE SELECTION LOGIC.

3-18. The time base selection logic consists of three Time Base Selection FF's (BIT 0-3 FF's) and an eight-to-one multiplexer circuit.

3-19. The desired time interval to be measured by the time base generator PCA is encoded into a three-bit control word. This control word is transferred from the computer A- or B-register to the Time Base Selection FF's by an OTA or OTB instruction with the select code of the time base generator. Either of these instructions supply high SCM, SCL, IOG, and IOO signals and the three-bit control word (IOBO 0, IOBO 1, and IOBO 2) to the time base generator.

3-20. When the IOO signal goes high at computer time T3, the three-bit control word is stored in the Time Base Selection FF's. The IOO signal also clears all nine decade dividers and the Control FF at this time.

3-21. The outputs of the Time Base Selection FF's control the eight-to-one multiplexer circuit. This circuit decodes the control word so that one of the eight decade dividers is selected as the time base (for time interval).

### 3-22. CONTROL LOGIC.

3-23. After the control word has been loaded into the Time Base Selection FF's, the time base generator is ready to begin measuring the time period. An STC,C instruction with the select code of the time base generator marks the beginning of the time period. As a result of this instruction, the time base generator PCA receives high IOG, SCM, SCL, STC, and CLF signals from the computer.

3-24. The STC signal sets the Control FF. The high set-side output of the Control FF gates the 100-kHz signal to the decade dividers and provides one of the enabling signals to the time flag gate (U36C).

3-25. The CLF signal clears the Flag Buffer and Flag FF's. The high clear-side output of the Flag FF provides another enabling signal to the time flag gate. (Because the clear-side output of the Time Flag FF is also high, the output of the time flag gate goes high at this time. However, this has no effect since the CLF signal provides an overriding clear signal to the Flag Buffer FF.) The decade dividers are now counting the 100-kHz signal and continue to count until the selected time interval has elapsed.

### 3-26. FLAG LOGIC.

3-27. The flag logic monitors the output of the eight-to-one multiplexer circuit for a signal indicating the end of the desired time interval.

3-28. For discussion purposes, assume that the control word specifies a time interval of one second. In this instance, the eight-to-one multiplexer selects the U86 decade divider as the time base. When the decade dividers have counted 0.8 second, the output of divider U86 goes high (paragraph 3-16). This signal is gated through the eight-to-one multiplexer circuit to the set input of the Time Flag FF. At the next computer time T5 (SIR), the Time Flag FF sets causing the output of the time flag gate to go low. At the count of one second, the output of divider U86 goes low. The Time Flag FF clears at the next SIR signal causing the output of the time flag gate to go high, setting the Flag Buffer FF. At the next computer time T2 (ENF), the Flag FF sets.

3-29. When the Flag FF is in the set state, the time base generator PCA generates an SRQ signal and, if programmed to do so, generates FLG and IRQ signals or an SKF signal. These signals indicate to the computer that the requested

time interval has ended. The following paragraphs describe how these signals are generated and how they are used by the computer.

3-30. SKIP-ON-FLAG SIGNAL. If the computer is programmed to wait for the Flag FF to be set (SFS instruction followed by a JMP \*-1 instruction for example), the resulting SFS signal gated with the set side of the Flag FF generates an SKF signal. This causes the computer to skip the next programmed instruction (JMP \*-1) and proceed with the program. Figure 3-2 illustrates the generation of an SKF signal by the time base generator PCA. Notice that SKF signal can also be generated when the Flag FF is in the clear state by programming a SFC instruction. Either way, the state of the Flag FF is being tested and the computer must be programmed to respond accordingly.

3-31. INTERRUPT SIGNALS. If the computer interrupt system has been enabled by an STF 00 instruction, the time base generator can be used to generate timed interrupts. Figure 3-3 illustrates the functions involved in an interrupt operation. To interrupt the main program at the end of a measured time interval, the following conditions must be met at the time base generator PCA:


- a. Control FF set (paragraph 3-24).
- b. Flag Buffer FF set (paragraph 3-28).
- c. Flag FF set (paragraph 3-28).
- d. IEN signal high (interrupt system enabled).
- e. PRH signal high (no higher priority interrupts).

3-32. When all of these conditions are established, an SIR signal at time T5 sets the IRQ FF which generates true FLG and IRQ signals. These signals are used by the computer I/O control and addressing circuits to generate an interrupt signal.

3-33. At time T2 following the interrupt, an ENF signal clears the IRQ FF. An SIR signal again sets the IRQ FF if the PRH signal is still high at time T5. The FLG and IRQ signals this time are used by the computer I/O control and addressing circuits to encode the interrupt address.

3-34. The next machine cycle will be under control of the instruction located at the interrupt address in memory. During this machine cycle, an IAK signal at time T6 clears the Flag Buffer FF and an ENF signal at time T2 clears the IRQ FF. The Flag FF remains set to inhibit lower priority interrupts by providing a low PRL signal.

3-35. At this point, the computer normally enters an interrupt subroutine. A CLC instruction is required at the beginning of the subroutine to disable the decade dividers and prevent the Error FF (paragraph 3-37) from being set. Also, just before leaving the subroutine, a CLF instruction is required to enable lower priority interrupts.

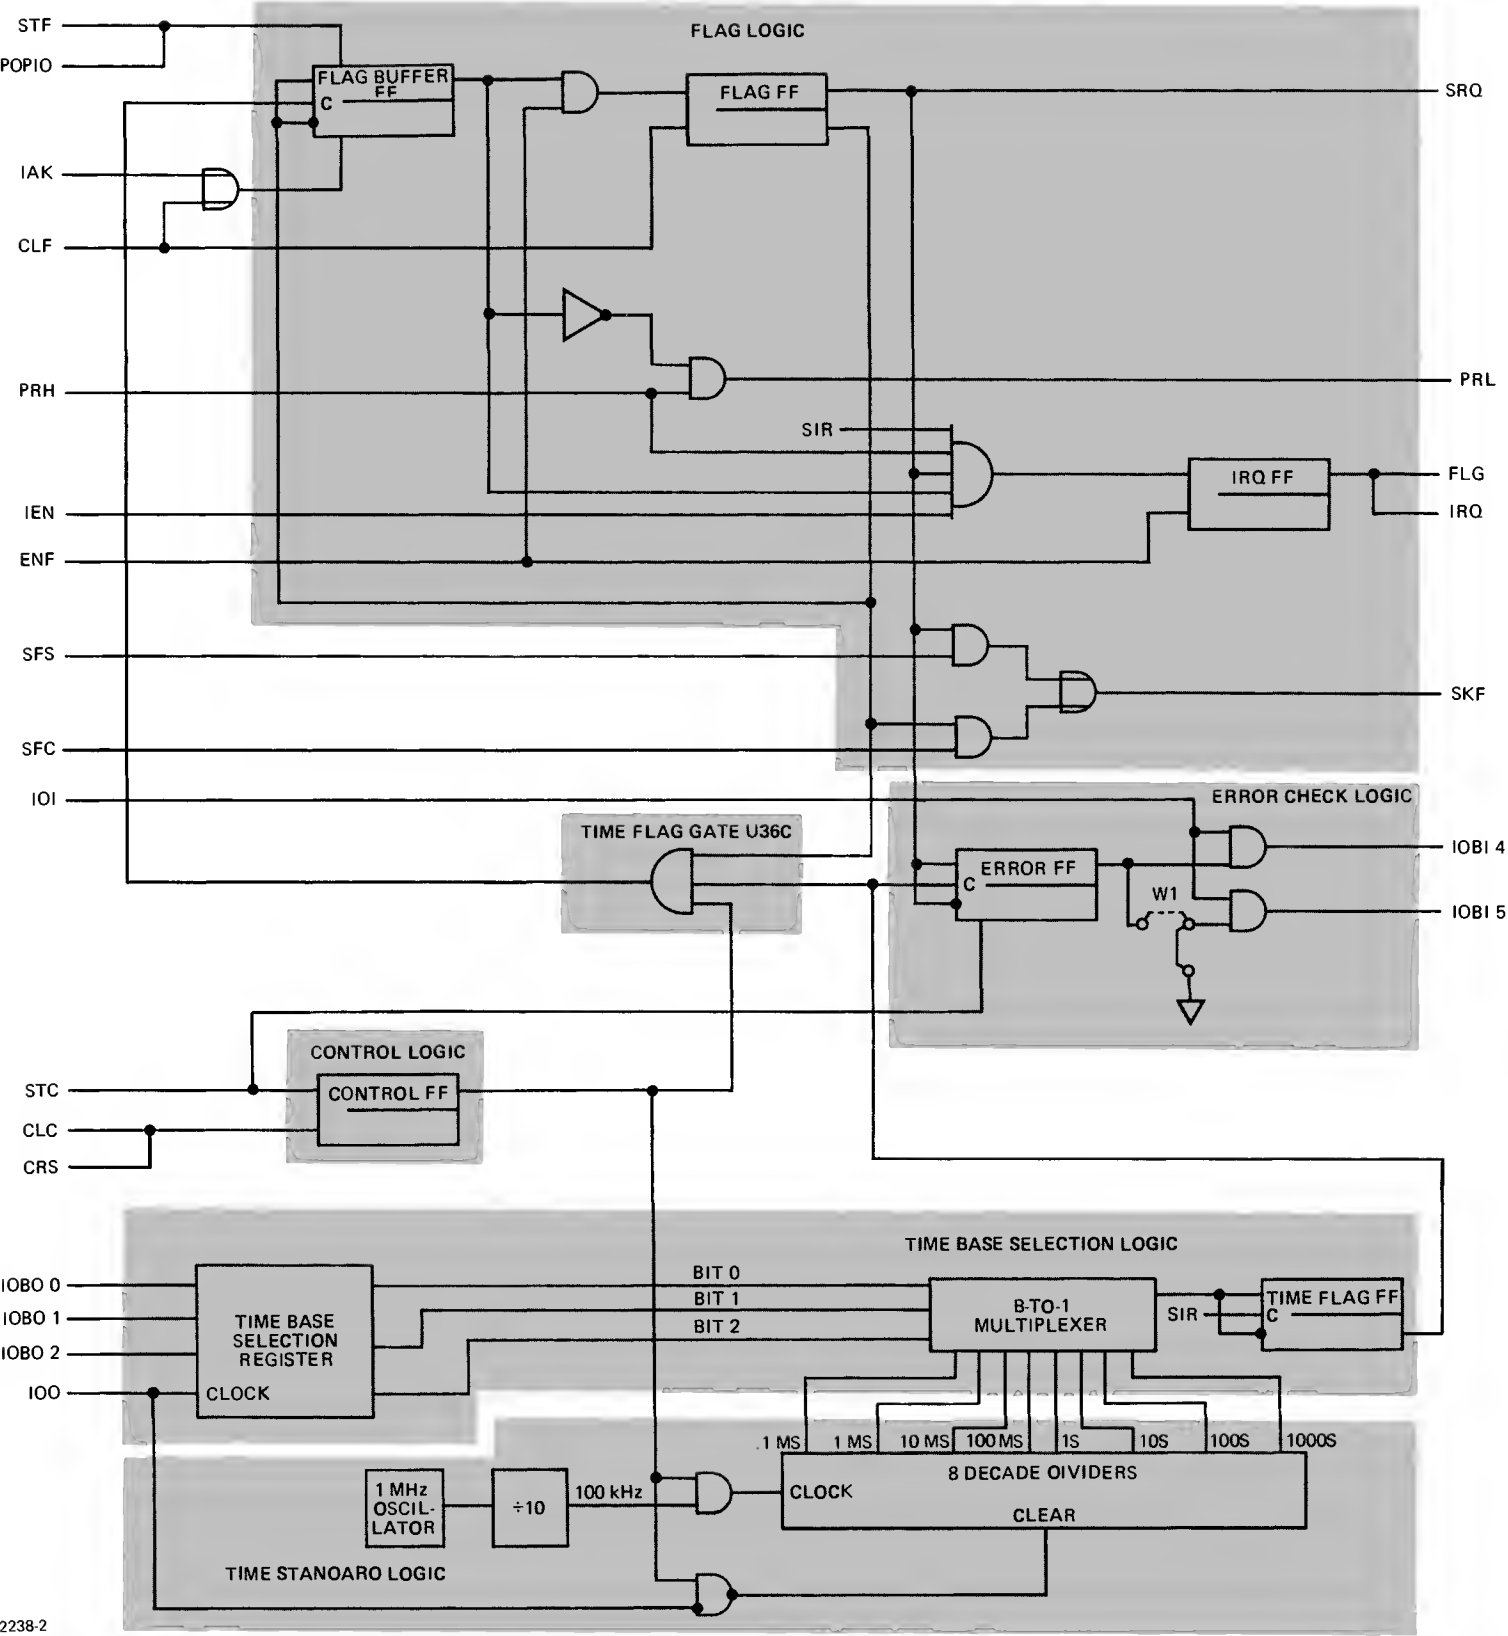

2238-2

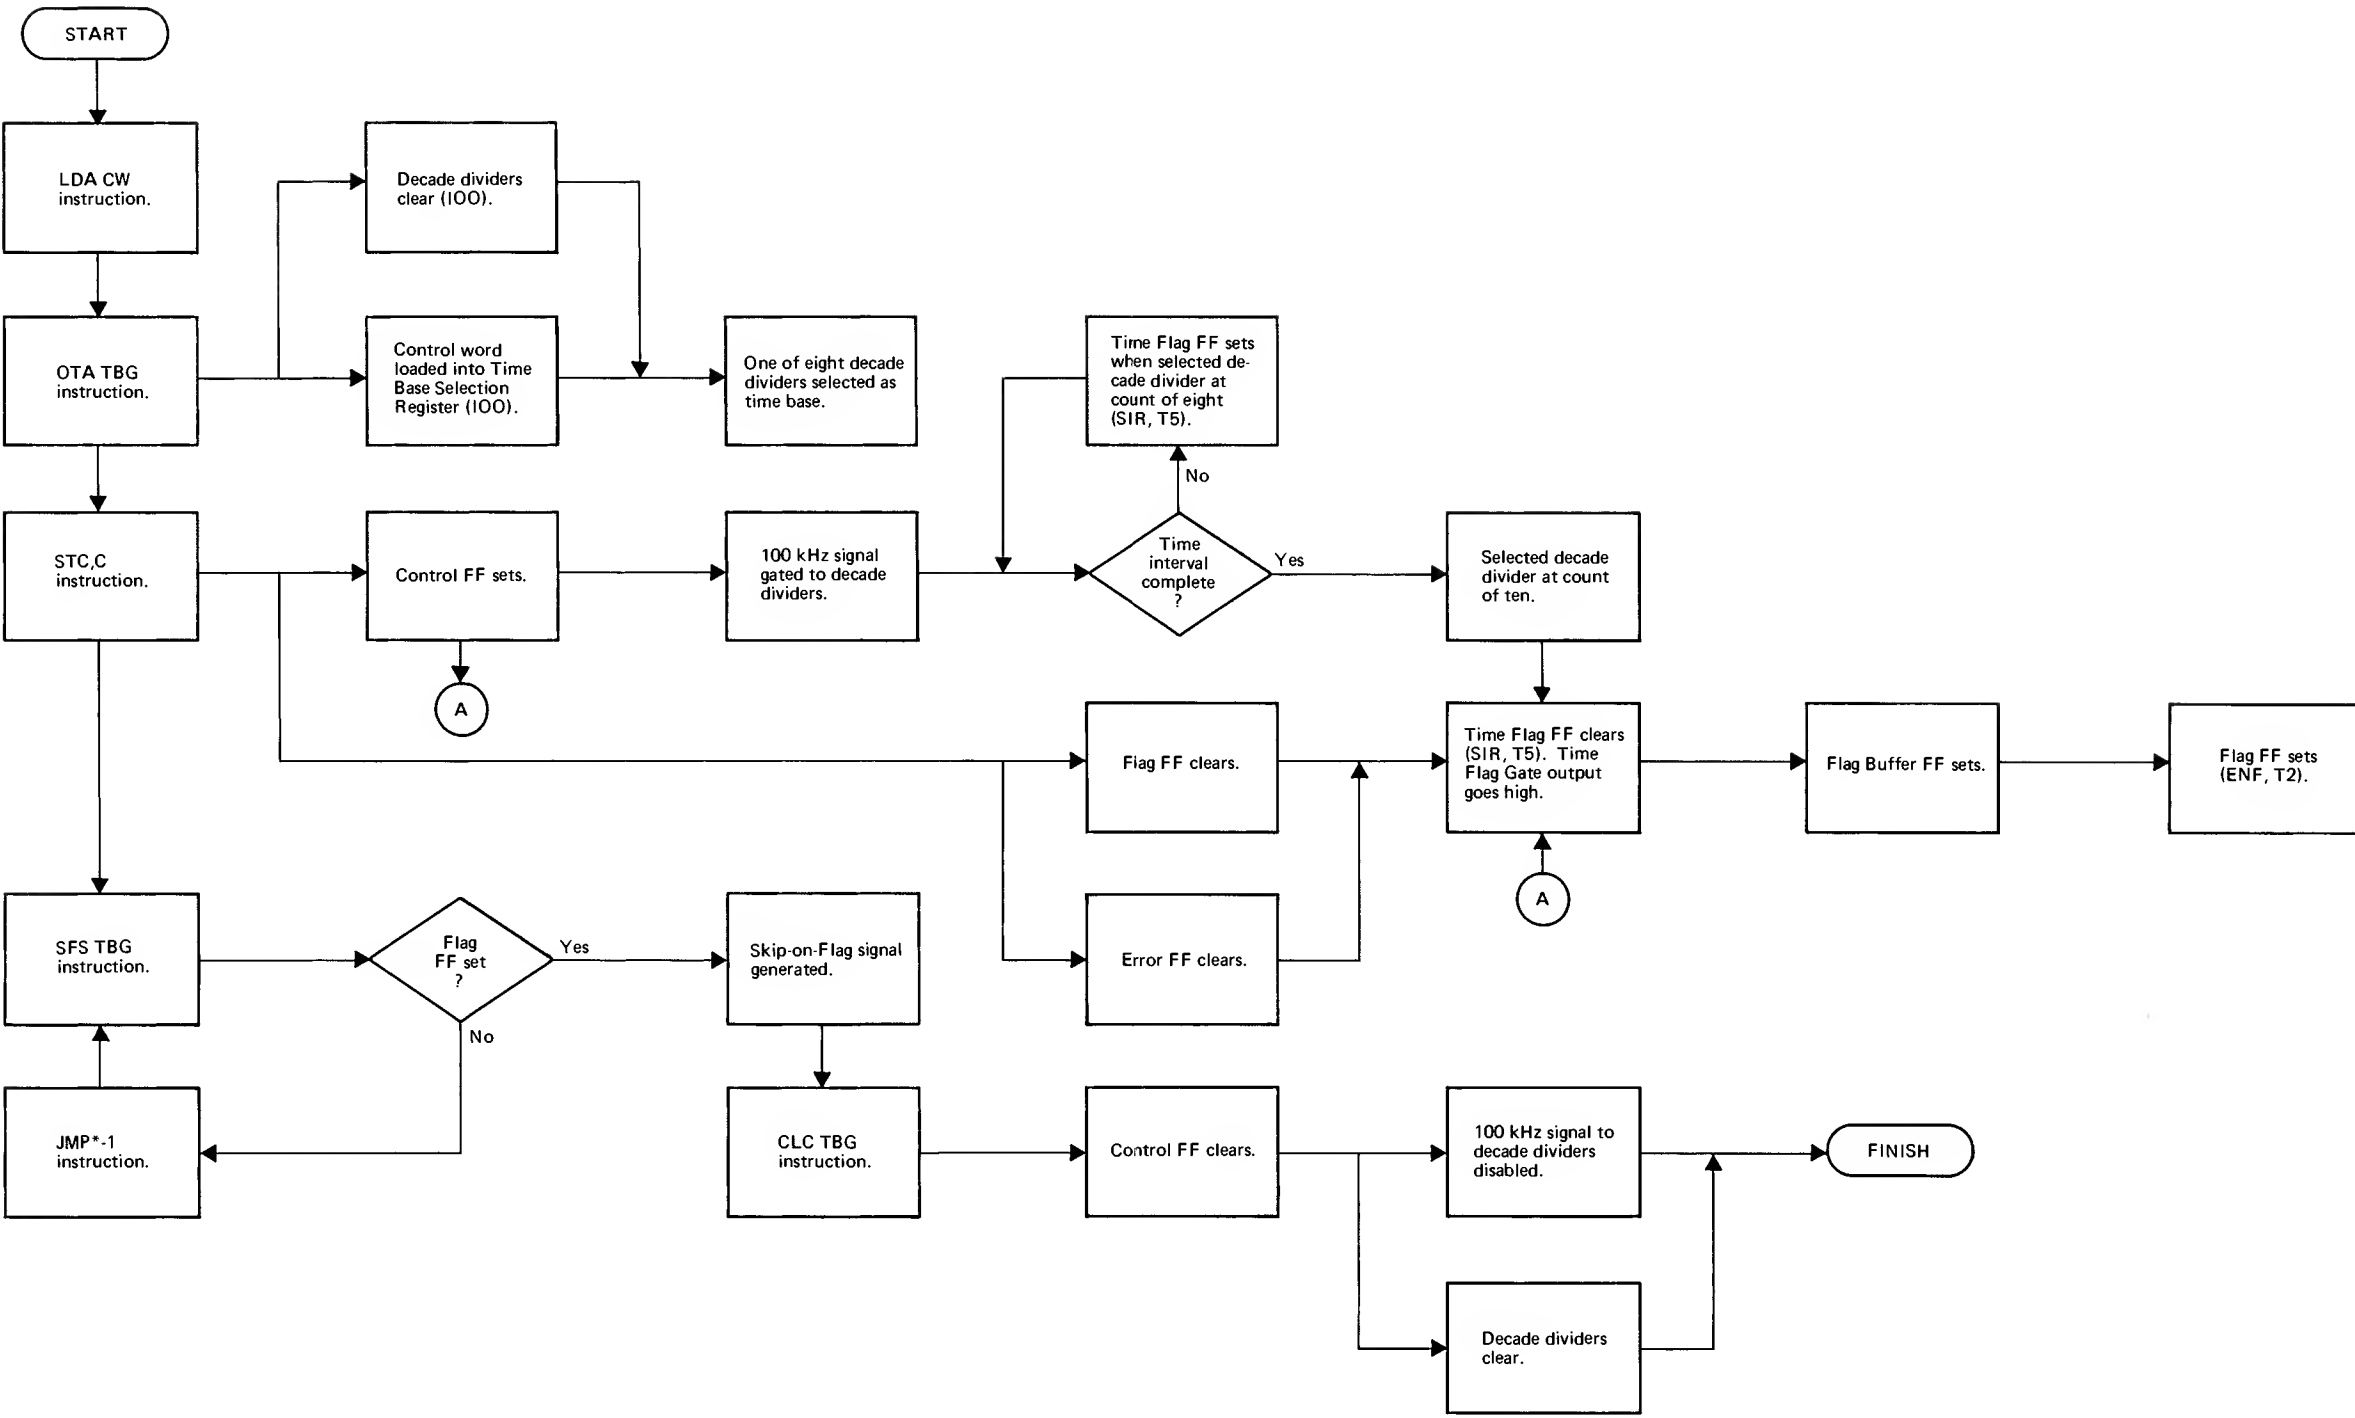


Figure 3-1. Time Base Generator Simplified Logic Diagram and Functional Operation Flowchart



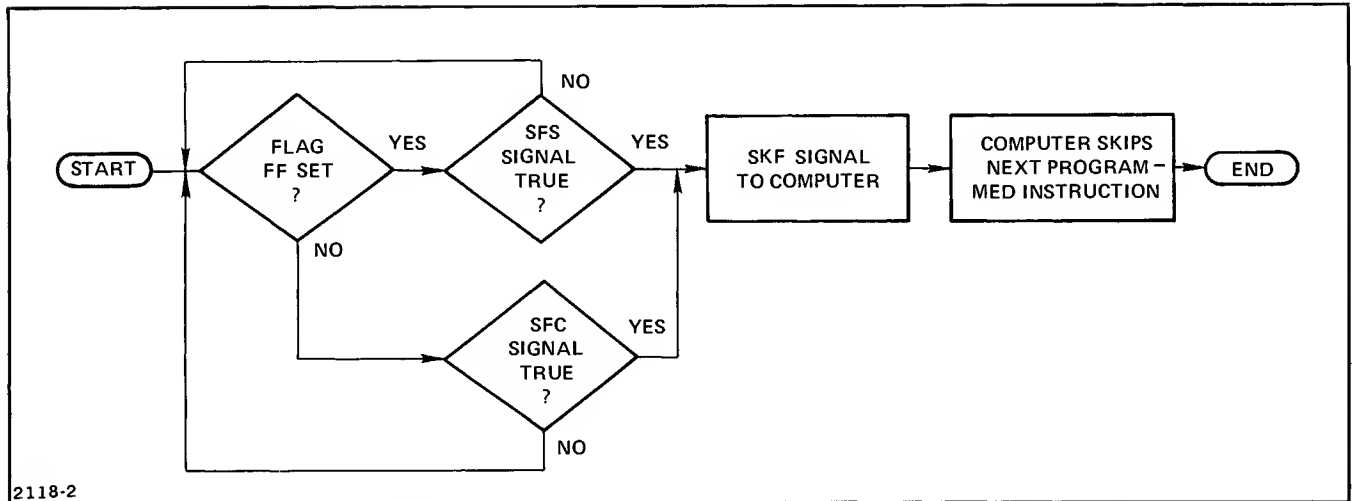


Figure 3-2. Skip-On-Flag Signal Generation Flowchart

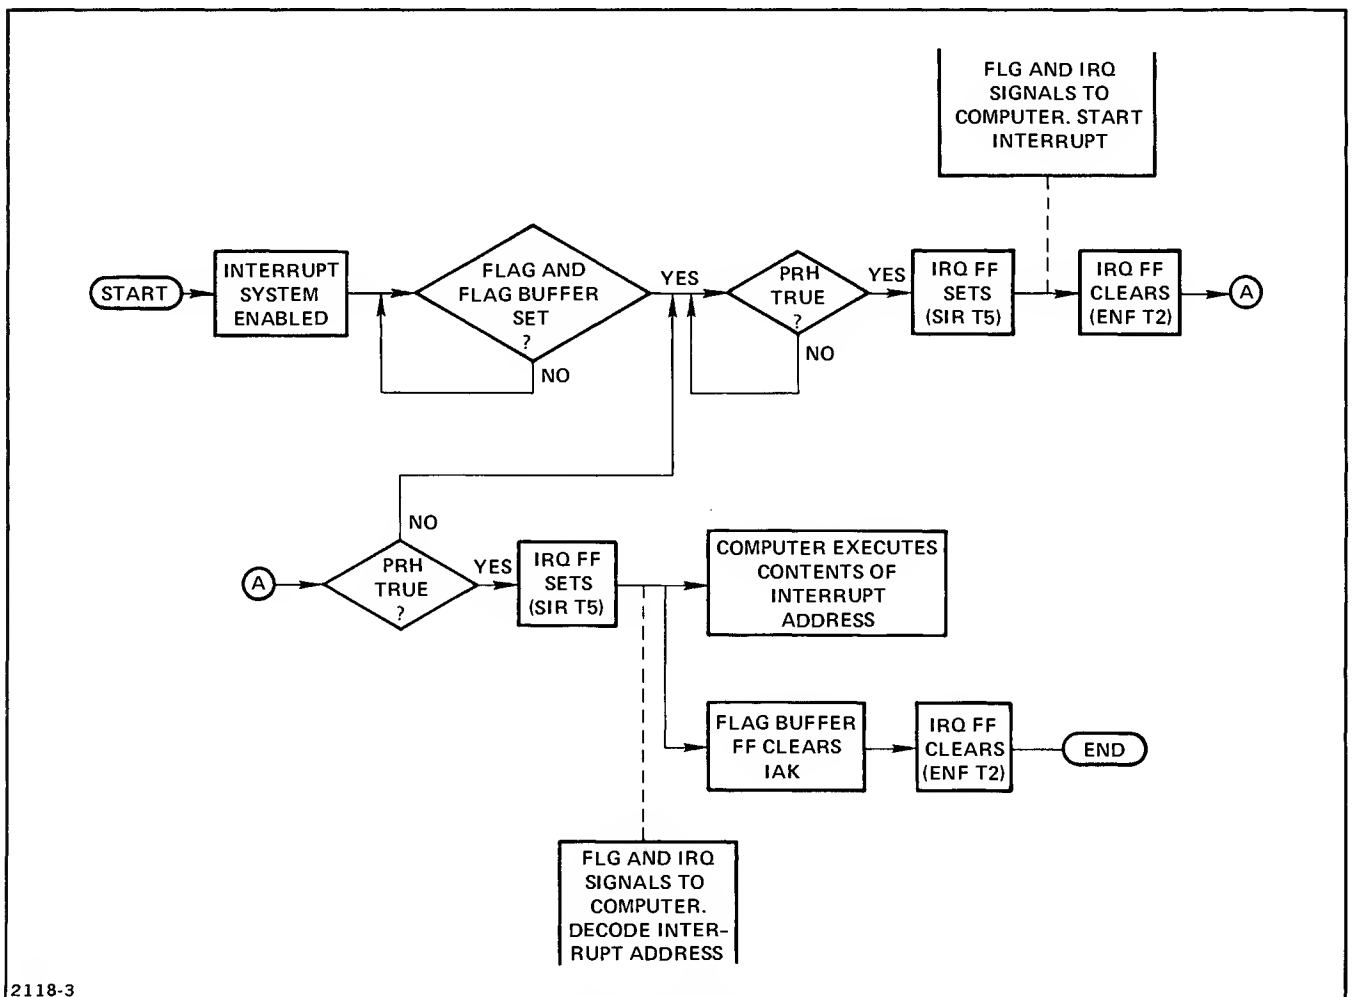


Figure 3-3. Interrupt Operation Flowchart

**3-36. ERROR CHECK LOGIC.**

3-37. The Error FF monitors the set-side output of the Flag FF and is clocked by the clear-side output of the Time Base FF. If the Flag FF is set (indicating that the desired time interval has elapsed) and the selected divider output goes low a second time (causing the Time Flag FF to clear), the Error FF sets.

3-38. The state (set or cleared) of the Error FF is read onto the IOBI 4 line (and the IOBI 5 line if selected by jumper W1) and loaded into the computer A- or B-register by an LIA or LIB instruction addressed to the time base generator. Bit 4 (or 5) of the A- or B-register can then be checked by software for a possible error condition.

#### **4-1. INTRODUCTION.**

4-2. This section provides maintenance information for the HP 12539C Time Base Generator Interface Kit. Included are preventive maintenance instructions, troubleshooting instructions, and maintenance data consisting of integrated circuit pin connections (figure 4-1), a time base generator PCA replaceable parts list (table 4-1), and a time base generator PCA parts location and logic diagram (figure 4-2).

#### **4-3. PREVENTIVE MAINTENANCE.**

4-4. Incorporate preventive maintenance for the time base generator with the preventive maintenance routines for the computer system. Inspect the time base generator PCA for cracked, broken, or burned components, insulation, and connections.

#### **4-5. TROUBLESHOOTING.**

4-6. Most malfunctions on the time base generator PCA can be traced by performing the diagnostic test, manual part no. 12539-90011, and analyzing error halts as they occur. Use the maintenance data contained in this section to isolate malfunctions to the component level.


4-7. To facilitate testing the decade dividers, jumper W2 can be moved to position B. This reduces the time interval required to operate the last four divider circuits. With jumper W2 in position B, the decade dividers for 0.1 millisecond (U77), 1 millisecond (U87), 10 milliseconds (U97), and 100 milliseconds (U96) operate normally. However, with jumper W2 in position B, the last four decade dividers operate at 1 millisecond (U86), 10 milliseconds (U76), 100 milliseconds (U66), and 1 second (U65).

**Note:** If jumper W2 is moved to position B, be sure to return jumper W2 to position A when testing is completed.

4-8. If crystal Y1 is replaced, check the oscillator output frequency at test point E4 using a Hewlett-Packard 5244L Electronic Counter or equivalent. The frequency should be  $1\text{-MHz} \pm 0.5\text{ Hz}$ . If the frequency is not within tolerance, adjust the frequency according to the oscillator adjustment procedures given in paragraph 4-10.

#### **4-9. OSCILLATOR ADJUSTMENT.**

4-10. Using a Hewlett-Packard 5244L Electronic Counter or equivalent frequency measuring device, observe the oscillator output frequency at test point E4. Adjust capacitor C19 to obtain an output frequency of  $1\text{-MHz} \pm 0.5\text{ Hz}$ .

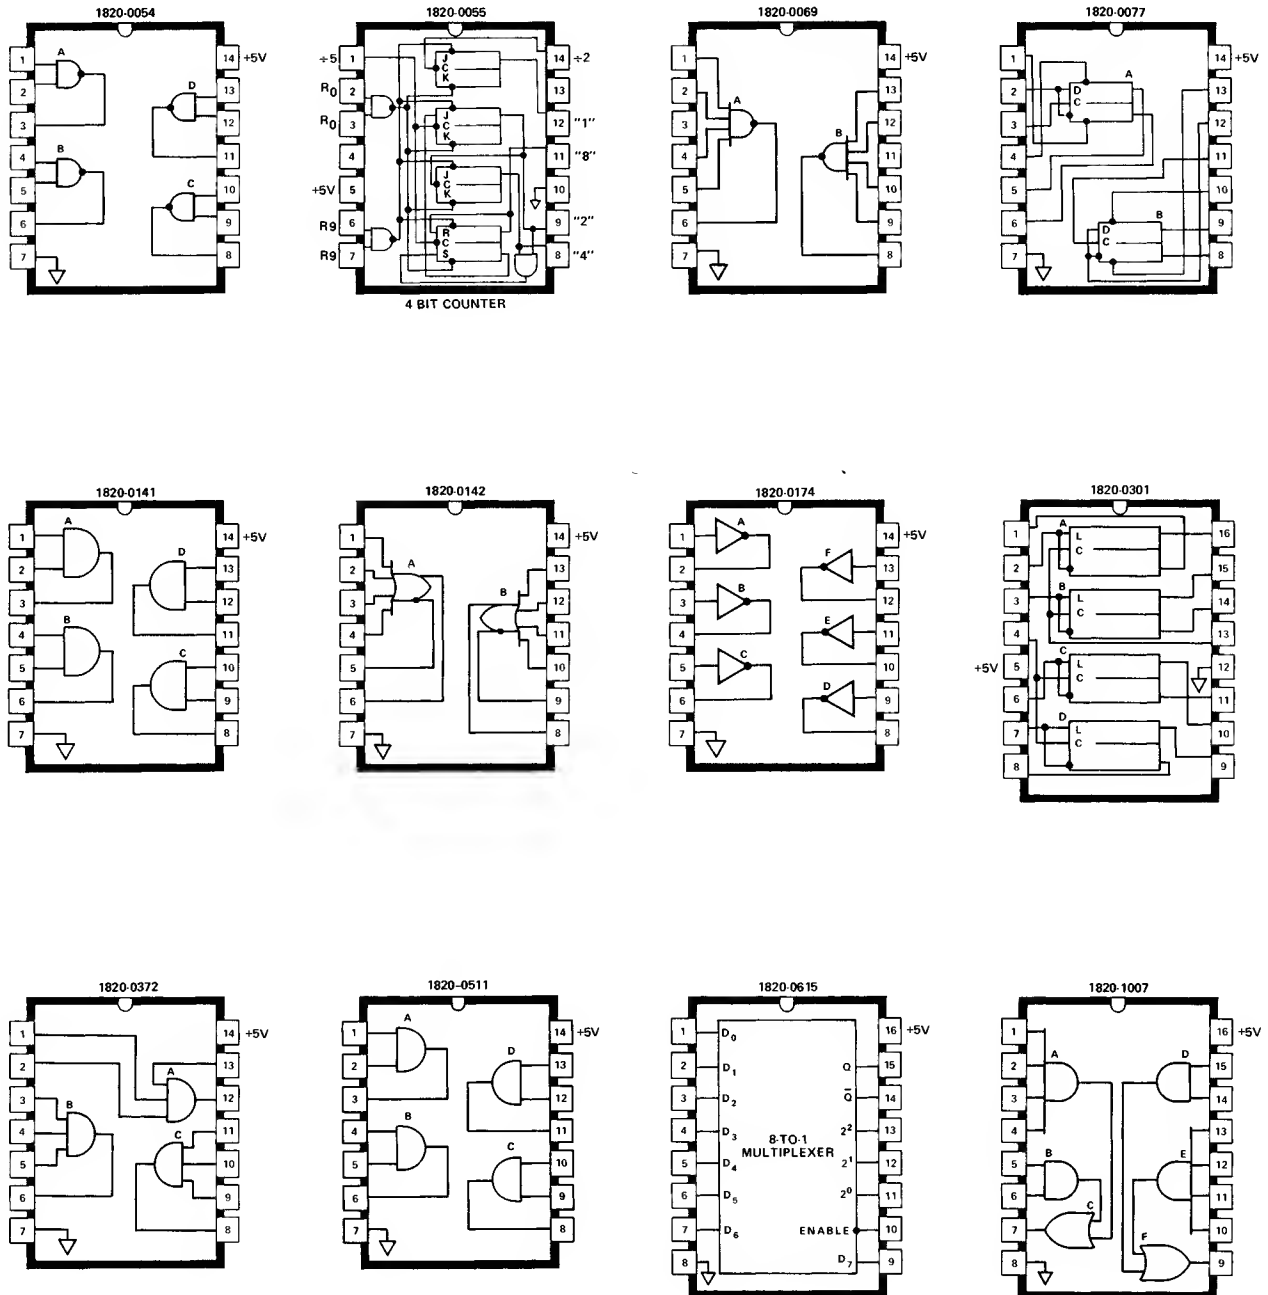

1820-0615: Data on one of the 8 input lines is transferred to the output line when the ENABLE line goes false. The specific input line to be transferred is determined by the three select lines.

Figure 4-1. Integrated Circuit Pin Connections

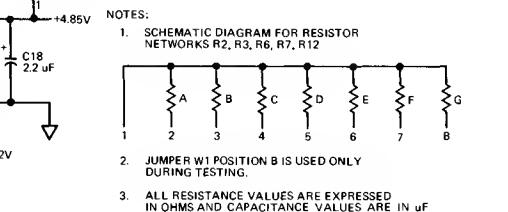


Table 4-1. Time Base Generator PCA Replaceable Parts

REFERENCE DESIGNATION	HP PART NO.	DESCRIPTION	MFR CODE	MFR PART NO.
C1, 18	12539-60003	TIME BASE GENERATOR PCA	28480	12539-60003
C2 thru C13,	0180-0197	CAPACITOR, fxd, elect, 2.2 $\mu$ F, 10%, 20 Vdcw	56289	150D225X9020A2-DYS
C15 thru C17	0160-2055	CAPACITOR, fxd, cer, 0.01 $\mu$ F, +80 -20%, 100 Vdcw	56289	C023F101F103ZS22-CD
C14	0160-2198	CAPACITOR, fxd, mica, 20 pF, 5%	72136	RDM15C200J3C
C19	0121-0036	CAPACITOR, var, cer, 5.5-18 pF	28480	0121-0036
CR1	1901-0040	DIODE, Si, 30 mA, 30WV	07263	FDG1088
Q1	1850-0158	TRANSISTOR, Ge, PNP	80131	2N2635
R1*	0757-0416	RESISTOR, fxd, flm, 511 ohms, 1%, 1/8W	28480	0757-0416
R2, 3, 6	1810-0020	RESISTOR NETWORK, flm (7 resistor)	28480	1810-0020
R4, 5 *	0757-0420	RESISTOR, fxd, flm, 750 ohms, 1%, 1/8W	28480	0757-0420
R7, 12	1810-0030	RESISTOR NETWORK, flm (7 resistor 1k, 5%, 0.15W each)	28480	1810-0030
R8	0698-3444	RESISTOR, fxd, flm, 316 ohms, 1%, 1/8W	28480	0698-3444
R9	0757-0280	RESISTOR, fxd, flm, 1k, 1%, 1/8W	28480	0757-0280
R10	0698-3440	RESISTOR, fxd, flm, 196 ohms, 1%, 1/8W	28480	0698-3440
R11	0698-3441	RESISTOR, fxd, flm, 215 ohms, 1%, 1/8W	28480	0698-3441
U24	1820-0141	INTEGRATED CIRCUIT, TTL	04713	MC3001P
U25, 46	1820-0077	INTEGRATED CIRCUIT, TTL	01295	SN7474N
U26, 34, 35	1820-0054	INTEGRATED CIRCUIT, TTL	01295	SN7400N
U27, 37, 47	1820-1007	INTEGRATED CIRCUIT	28480	1820-1007
U36	1820-0372	INTEGRATED CIRCUIT	28480	1820-0372
U45	1820-0069	INTEGRATED CIRCUIT, TTL	01295	SN7420N
U55	1820-0174	INTEGRATED CIRCUIT, TTL	01295	SN7404N
U56	1820-0511	INTEGRATED CIRCUIT, TTL	01295	SN7408N
U57	1820-0301	INTEGRATED CIRCUIT, TTL	01295	SN7475N
U65, 66, U75 thru U77, 86, 87, 96, 97,	1820-0055	INTEGRATED CIRCUIT, TTL	01295	SN7490N
U67	1820-0615	INTEGRATED CIRCUIT, TTL	28480	1820-0615
U74	1820-0142	INTEGRATED CIRCUIT	04713	MC1004P
W1, 2	8159-0005	JUMPER, wire	28480	8159-0005
Y1	0410-0478	CRYSTAL, quartz, 1.0 MHz, 32 pF	28480	0410-0478

\*Used on series no. 1232.





4-5/4-6



# REPLACEABLE PARTS

## 5-1. INTRODUCTION.

5-2. This section provides information for ordering replacement parts for the HP 12539C Time Base Generator Interface Kit. Table 5-1 is a numerical listing of all replaceable parts in the interface kit.

5-3. A time base generator PCA replaceable parts list (table 4-1) and a parts location diagram (figure 4-2) are provided in section IV of this manual.

5-4. Tables 4-1 and 5-1 list the following information for each replaceable part:

- a. Reference designation of the part (table 4-1 only). (Refer to table 5-3 for an explanation of the designations used in the REFERENCE DESIGNATION column.)
- b. Hewlett-Packard part number.
- c. Description of the part. (Refer to table 5-3 for an explanation of the abbreviations used in the DESCRIPTION column.)
- d. A five digit code that corresponds to the manufacturer of the part. (Refer to table 5-2 for the code list of manufacturers.)
- e. Manufacturers part number.
- f. Total quantity (TQ) of each part used in the kit or assembly (table 5-1 only).

## 5-5. ORDERING INFORMATION.

5-6. To order replacement parts, address the order or inquiry to the nearest Hewlett-Packard Sales and Service Office. Refer to the list at the back of this manual for addresses. Specify the following information for each part ordered:

- a. Identification of the kit or assembly containing the part (refer to paragraphs 1-8 through 1-10).
- b. Hewlett-Packard part number for each part.
- c. Description of each part.
- d. Circuit reference designation for each part (if applicable).

Table 5-1. Numerical List of Replaceable Parts

HP PART NO.	DESCRIPTION	MFR CODE	MFR PART NO.	TQ
0121-0036	CAPACITOR, var, cer, 5.5-18 pF	28480	0121-0036	1
0160-2055	CAPACITOR, fxd, cer, 0.01 $\mu$ F, +80 -20%, 100 Vdcw	56289	C023F101F103ZS22-CD	15
0160-2198	CAPACITOR, fxd, mica, 20 pF, 5%	72136	RDM15C200J3C	1
0180-0197	CAPACITOR, fxd, elect, 2.2 $\mu$ F, 10%, 20 Vdcw	56289	150D225X9020A2-DYS	2
0410-0478	CRYSTAL, quartz, 1.0 MHz, 32 pF	28480	0410-0478	1
0698-3440	RESISTOR, fxd, flm, 196 ohms, 1%, 1/8W	28480	0698-3440	1
0698-3441	RESISTOR, fxd, flm, 215 ohms, 1%, 1/8W	28480	0698-3441	1
0698-3444	RESISTOR, fxd, flm, 316 ohms, 1%, 1/8W	28480	0698-3444	1
0757-0280	RESISTOR, fxd, flm, 1k, 1%, 1/8W	28480	0757-0280	1
0757-0416	RESISTOR, fxd, flm, 511 ohms, 1%, 1/8W	28480	0757-0416	1
0757-0420	RESISTOR, fxd, flm, 750 ohms, 1%, 1/8W	28480	0757-0420	2
1810-0020	RESISTOR NETWORK, flm (7 resistor)	28480	1810-0020	3
1810-0030	RESISTOR NETWORK, flm (7 resistor 1k, 5%, 0.15W each)	28480	1810-0030	2
1820-0054	INTEGRATED CIRCUIT, TTL	01295	SN7400N	3
1820-0055	INTEGRATED CIRCUIT, TTL	01295	SN7490N	9
1820-0069	INTEGRATED CIRCUIT, TTL	01295	SN7420N	1
1820-0077	INTEGRATED CIRCUIT, TTL	01295	SN7474N	2
1820-0141	INTEGRATED CIRCUIT, TTL	04713	MC3001P	1
1820-0142	INTEGRATED CIRCUIT	04713	MC1004P	1
1820-0174	INTEGRATED CIRCUIT, TTL	01295	SN7404N	1
1820-0301	INTEGRATED CIRCUIT, TTL	01295	SN7475N	1
1820-0372	INTEGRATED CIRCUIT, TTL	28480	1820-0372	1
1820-0511	INTEGRATED CIRCUIT, TTL	01295	SN7408N	1
1820-0615	INTEGRATED CIRCUIT, TTL	28480	1820-0615	1
1820-1007	INTEGRATED CIRCUIT	28480	1820-1007	3
1850-0158	TRANSISTOR, Ge, PNP	80131	2N2635	1
1901-0040	DIODE, Si, 30 mA, 30 WV	07263	FDG1088	1
8159-0005	JUMPER, wire	28480	8159-0005	2
5040-6001	EXTRACTOR, PC	28480	5040-6001	2
12539-60003	TIME BASE GENERATOR	28480	12539-60003	1
12539-90008	OPERATING AND SERVICE MANUAL	28480	12539-90008	1

Table 5-2. Code list of Manufacturers

The following code numbers are from the Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 and H4-2, and the latest supplements.					
Code No.	Manufacturer	Address	Code No.	Manufacturer	Address
01295	Texas Instruments, Inc., Transistor		28480	Hewlett-Packard Co. ....	Palo Alto, Cal.
	Products Div. ....	Dallas, Texas	56289	Sprague Electric Co. ....	North Adams, Mass.
04713	Motorola, Inc., Semiconductor		72136	Electro Motive Mfg. Co., Inc. ....	Willimantic, Conn.
	Prod. Div. ....	Phoenix, Arizona	80131	Electronic Industries Association.	
07263	Fairchild Camera & Instr. Corp.,			Any brand part meeting	
	Semiconductor Div. ....	Mountain View, Cal.		EIA Standards ....	Washington, D.C.

Table 5-3. Reference Designations and Abbreviations

REFERENCE DESIGNATIONS		
<b>A</b> = assembly <b>B</b> = motor, synchro <b>BT</b> = battery <b>C</b> = capacitor <b>CB</b> = circuit breaker <b>CR</b> = diode <b>DL</b> = delay line <b>DS</b> = indicator <b>E</b> = Misc electrical parts <b>F</b> = fuse <b>FL</b> = filter <b>J</b> = receptacle connector	<b>K</b> = relay <b>L</b> = inductor <b>M</b> = meter <b>P</b> = plug connector <b>Q</b> = semiconductor device other than diode or integrated circuit <b>R</b> = resistor <b>RT</b> = thermistor <b>S</b> = switch <b>T</b> = transformer	<b>TB</b> = terminal board <b>TP</b> = test point <b>U</b> = integrated circuit, non-repairable assembly <b>V</b> = vacuum tube, photocell, etc. <b>VR</b> = voltage regulator <b>W</b> = jumper wire <b>X</b> = socket <b>Y</b> = crystal <b>Z</b> = tuned cavity, network
ABBREVIATIONS		
<b>A</b> = amperes <b>ac</b> = alternating current <b>Ag</b> = silver <b>Al</b> = aluminum <b>ar</b> = as required <b>adj</b> = adjust <b>assy</b> = assembly  <b>b</b> = base <b>bp</b> = bandpass <b>bpi</b> = bits per inch <b>blk</b> = black <b>blu</b> = blue <b>brn</b> = brown <b>brs</b> = brass <b>Btu</b> = British thermal unit <b>Be Cu</b> = beryllium copper  <b>cpi</b> = characters per inch <b>coll</b> = collector <b>cw</b> = clockwise <b>ccw</b> = counterclockwise <b>cer</b> = ceramic <b>com</b> = common <b>crt</b> = cathode-ray tube <b>CTL</b> = complementary-transistor logic <b>cath</b> = cathode <b>Cd pl</b> = cadmium plate <b>comp</b> = composition <b>conn</b> = connector <b>compl</b> = complete  <b>dc</b> = direct current <b>dr</b> = drive <b>DTL</b> = diode-transistor logic <b>depc</b> = deposited carbon <b>dpdt</b> = double-pole, double-throw <b>dpst</b> = double-pole, single-throw  <b>em</b> = emitter <b>ECL</b> = emitter-coupled logic <b>ext</b> = external <b>encap</b> = encapsulated <b>elctlt</b> = electrolytic  <b>F</b> = farads <b>FF</b> = flip-flop <b>flh</b> = flat head <b>flm</b> = film <b>fxd</b> = fixed <b>filh</b> = fillister head  <b>G</b> = giga ( $10^9$ ) <b>Ge</b> = germanium <b>gl</b> = glass <b>gnd</b> = ground(ed)	<b>gra</b> = gray <b>grn</b> = green  <b>H</b> = henries <b>Hg</b> = mercury <b>hr</b> = hour(s) <b>Hz</b> = hertz <b>hdw</b> = hardware <b>hex</b> = hexagon, hexagonal  <b>ID</b> = inside diameter <b>IF</b> = intermediate frequency <b>in.</b> = inch, inches <b>I/O</b> = input/output <b>int</b> = internal <b>incl</b> = include(s) <b>insul</b> = insulation, insulated <b>impgrg</b> = impregnated <b>incand</b> = incandescent <b>ips</b> = inches per second  <b>k</b> = kilo ( $10^3$ ), kilohm  <b>lp</b> = low pass  <b>m</b> = milli ( $10^{-3}$ ) <b>M</b> = mega ( $10^6$ ), megohm <b>My</b> = Mylar <b>mfr</b> = manufacturer <b>mom</b> = momentary <b>mtg</b> = mounting <b>misc</b> = miscellaneous <b>met. ox.</b> = metal oxide <b>mintr</b> = miniature  <b>n</b> = nano ( $10^{-9}$ ) <b>nc</b> = normally closed or no connection <b>Ne</b> = neon <b>no.</b> = number <b>n.o.</b> = normally open <b>np</b> = nickel plated <b>NPN</b> = negative-positive-negative <b>NPO</b> = negative-positive zero (zero temperature coefficient) <b>NSR</b> = not separately replaceable <b>NRFR</b> = not recommended for field replacement  <b>OD</b> = outside diameter <b>OBD</b> = order by description <b>orn</b> = orange <b>ovh</b> = oval head <b>oxd</b> = oxide  <b>p</b> = pico ( $10^{-12}$ ) <b>PC</b> = printed circuit	<b>PCA</b> = printed-circuit assembly <b>PWB</b> = printed-wiring board <b>phh</b> = phillips head <b>pk</b> = peak <b>p-p</b> = peak-to-peak <b>pt</b> = point <b>prv</b> = peak inverse voltage <b>PNP</b> = positive-negative-positive <b>pwv</b> = peak working voltage <b>porc</b> = porcelain <b>posn</b> = position(s) <b>pozi</b> = pozidrive  <b>rf</b> = radio frequency <b>rdh</b> = round head <b>rms</b> = root-mean-square <b>rww</b> = reverse working voltage <b>rect</b> = rectifier <b>r/min</b> = revolutions per minute <b>RTL</b> = resistor-transistor logic  <b>s</b> = second <b>SB, TT</b> = slow blow <b>Se</b> = selenium <b>Si</b> = silicon <b>scr</b> = silicon controlled rectifier <b>sst</b> = stainless steel <b>stl</b> = steel <b>spcl</b> = special <b>spdt</b> = single-pole, double-throw <b>spst</b> = single-pole, single-throw  <b>Ta</b> = tantalum <b>td</b> = time delay <b>Ti</b> = titanium <b>tgl</b> = toggle <b>thd</b> = thread <b>tol</b> = tolerance <b>TTL</b> = transistor transistor logic  <b>U(<math>\mu</math>)</b> = micro ( $10^{-6}$ )  <b>V</b> = volt(s) <b>var</b> = variable <b>vio</b> = violet <b>Vdcw</b> = direct current working volts  <b>W</b> = watts <b>ww</b> = wirewound <b>wht</b> = white <b>WIV</b> = working inverse voltage  <b>yel</b> = yellow





## ELECTRONIC

## SALES &amp; SERVICE OFFICES

## UNITED STATES

## ALABAMA

8290 Whitesburg Dr., S.E.  
P.O. Box 4207  
Huntsville 35802  
Tel: (205) 881-4591  
TWX: 810-726-2204

## ARIZONA

2336 E. Magnolia St.  
Phoenix 85034  
Tel: (602) 244-1381  
TWX: 910-951-1330

2424 East Aragon Rd.  
Tucson 85706  
Tel: (602) 889-4661

## CALIFORNIA

1430 East Orangehorpe Ave.  
Fullerton 92631  
Tel: (714) 870-1000  
TWX: 910-592-1288

3939 Lankershim Boulevard  
North Hollywood 91604  
Tel: (213) 877-1282  
TWX: 910-499-2170

6515 Arizona Place  
Los Angeles 90045  
Tel: (213) 776-7500  
TWX: 910-367-2092

1101 Embarradero Road  
Palo Alto 94303  
Tel: (415) 327-6500  
TWX: 910-373-1280

2220 Watt Ave.  
Sacramento 95825  
Tel: (916) 482-1463  
TWX: 910-367-2092

9606 Aero Drive  
P.O. Box 23333  
San Diego 92123  
Tel: (714) 279-3200  
TWX: 910-335-2000

## COLORADO

5600 South Ulster Parkway  
Englewood 80110  
Tel: (303) 771-3455  
TWX: 910-935-0705

## CONNECTICUT

12 Lunar Drive  
New Haven 06525  
Tel: (203) 389-6551  
TWX: 710-465-2029

## FLORIDA

P.O. Box 24210  
2806 W. Oakland Park Blvd  
Ft. Lauderdale 33307  
Tel: (305) 731-2020  
TWX: 510-955-4099

P.O. Box 13910  
6177 Lake Ellenor Dr  
Orlando, 32809  
Tel: (305) 859-2900  
TWX: 810-850-0113

## GEORGIA

P.O. Box 28234  
450 Interstate North  
Atlanta 30328  
Tel: (404) 436-6181  
TWX: 810-766-4890

## HAWAII

2875 So. King Street  
Honolulu 96814  
Tel: (808) 955-4455

## ILLINOIS

5500 Howard Street  
Skokie 60076  
Tel: (312) 677-0400  
TWX: 910-223-3613

## INDIANA

3839 Meadows Drive  
Indianapolis 46205  
Tel: (317) 546-4891  
TWX: 810-341-3263

## IOWA

1902 Broadway  
Iowa City 52240  
Tel: (319) 338-9466  
Night: (319) 338-9466

## LOUISIANA

P. O. Box 840  
3239 Williams Boulevard  
Kenner 70052  
Tel: (504) 721-6201  
TWX: 810-955-5524

## MARYLAND

6707 Whitestone Road  
Baltimore 21207  
Tel: (301) 944-5400  
TWX: 710-862-9157

20010 Century Blvd.  
Germantown 20767  
Tel: (31) 428-0700

P.O. Box 1648  
2 Choke Cherry Road  
Rockville 20850  
Tel: (301) 948-6370  
TWX: 710-828-9684

## MASSACHUSETTS

32 Hartwell Ave.  
Lexington 02173  
Tel: (617) 861-8960  
TWX: 710-326-6904

## MICHIGAN

23855 Research Drive  
Farmington 48024  
Tel: (313) 476-6400  
TWX: 810-242-2900

## MINNESOTA

2459 University Avenue  
St. Paul 55114  
Tel: (612) 945-9461  
TWX: 910-563-3734

## MISSOURI

11131 Colorado Ave.  
Kansas City 64137  
Tel: (816) 763-8000  
TWX: 910-771-2087

148 Weldon Parkway  
Maryland Heights 63043  
Tel: (314) 567-1455  
TWX: 910-764-0830

## NEVADA

Las Vegas  
Tel: (702) 382-5777

## NEW JERSEY

W. 120 Century Rd.  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951

## NEW MEXICO

P.O. Box 8366  
Station C  
6501 Lomas Boulevard N.E.  
Albuquerque 87108  
Tel: (505) 265-3713  
TWX: 910-989-1665

156 Wyatt Drive  
Las Cruces 88001  
Tel: (505) 526-2485  
TWX: 910-983-0550

## NEW YORK

6 Automall Lane  
Computer Park  
Albany 12205  
Tel: (518) 458-1550  
TWX: 710-441-8270

1219 Campville Road  
Endicott 13760  
Tel: (607) 754-0050  
TWX: 510-252-0890

New York City  
Manhattan, Bronx  
Contact Paramus, NJ Office

Tel: (201) 265-5000  
Brooklyn, Queens, Richmond  
Contact Woodbury, NY Office  
Tel: (516) 921-0300

82 Washington Street  
Poughkeepsie 12601  
Tel: (914) 454-7330  
TWX: 510-248-0012

39 Saginaw Drive  
Rochester 14623  
Tel: (716) 473-9500  
TWX: 510-253-5981

5858 East Molloy Road  
Syracuse 13211  
Tel: (315) 454-2486  
TWX: 710-541-0482

1 Crossways Park West  
Woodbury 11797  
Tel: (516) 921-0300  
TWX: 510-221-2168

## NORTH CAROLINA

P.O. Box 5188  
1923 North Main Street  
High Point 27262  
Tel: (919) 885-8101  
TWX: 510-926-1516

## SOUTH CAROLINA

6941-O N. Trenholm Road  
Columbia 29260  
Tel: (803) 782-6493

## OHIO

16500 Sprague Road  
Cleveland 44130  
Tel: (216) 243-7300  
Night: 243-7305  
TWX: 810-423-9431

330 Progress Rd.  
Dayton 45449  
Tel: (513) 859-8202  
TWX: 810-459-1925

6665 Busch Blvd.  
Columbus 43229  
Tel: (614) 846-1300

## OKLAHOMA

P.O. Box 32008  
Oklahoma City 73132  
Tel: (405) 721-0200  
TWX: 910-830-6862

## OREGON

17890 SW Boones Ferry Road  
Tualatin 97062  
Tel: (503) 620-3350  
TWX: 910-467-8714

## PENNSYLVANIA

111 Zeta Drive  
Pittsburgh 15238  
Tel: (412) 782-0400  
Night: 782-0401  
TWX: 710-795-3124

1021 8th Avenue  
King of Prussia Industrial Park  
Suite of Prussia 19406  
Tel: (215) 265-7000  
TWX: 510-660-2670

## RHODE ISLAND

873 Waterman Ave.  
East Providence 02914  
Tel: (401) 434-5535  
TWX: 710-381-7573

## TENNESSEE

Memphis  
Tel: (901) 274-7472

## TEXAS

P.O. Box 1270  
201 E. Arapahoe Rd.  
Richardson 75080  
Tel: (214) 231-6101  
TWX: 910-867-4723

P.O. Box 27409  
6300 Westpark Drive  
Suite 100  
Houston 77027  
Tel: (713) 781-6000  
TWX: 910-881-2645

231 Billy Mitchell Road  
San Antonio 78226  
Tel: (512) 434-4171  
TWX: 910-871-1170

## UTAH

2890 South Main Street  
Salt Lake City 84115  
Tel: (801) 487-0715  
TWX: 910-925-5681

## VIRGINIA

P.O. Box 9854  
2914 Hungary Springs Road  
Richmond 23228  
Tel: (804) 285-3431  
TWX: 710-956-0157

## WASHINGTON

Bellefield Office Pk.  
1203 - 114th SE  
Bellevue 98004  
Tel: (206) 454-3971  
TWX: 910-443-2446

## WEST VIRGINIA

Charleston  
Tel: (304) 345-1640

## WISCONSIN

9431 W. Beloit Road  
Suite 117  
Milwaukee 53227  
Tel: (414) 541-0550

## FOR U.S. AREAS NOT LISTED:

Contact the regional office nearest you: Atlanta, Georgia . . . North Hollywood, California . . . Paramus, New Jersey . . . Skokie, Illinois. Their complete addresses are listed above.  
\*Service Only

## CANADA

## ALBERTA

Hewlett-Packard (Canada) Ltd  
11748 Kingsway Ave.  
Edmonton T5G 0X5  
Tel: (403) 452-3670  
TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd.  
915-42 Avenue S.E.  
Calgary T2G 1Z1  
Tel: (403) 262-4279

## BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd  
837 E. Cordova Street  
Vancouver V6A 3R2  
Tel: (604) 254-0531  
TWX: 610-922-5059

## MANITOBA

Hewlett-Packard (Canada) Ltd  
513 Century St  
St. James  
Winnipeg R3H 0L8  
Tel: (204) 786-7581  
TWX: 610-671-3531

## NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.  
2745 Outh Village Rd.  
Halifax B3L 4G7  
Tel: (902) 455-0511  
TWX: 610-271-4482

## ONTARIO

Hewlett-Packard (Canada) Ltd.  
1785 Woodward Dr.  
Ottawa K2C 0P9  
Tel: (613) 225-6530  
TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
Mississauga L4V 1L9  
Tel: (416) 678-9430  
TWX: 610-492-4246

## QUEBEC

Hewlett-Packard (Canada) Ltd.  
275 Hymus Boulevard  
Pointe Claire H9R 1G7  
Tel: (514) 561-6520  
TWX: 610-422-3022  
Telex: 05-821521 HPCL

Hewlett-Packard (Canada) Ltd.  
2376 Galvani Street  
Ste Foy G1N 4G4  
Tel: (418) 688-8710

## FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Mississauga

## CENTRAL AND SOUTH AMERICA

## ARGENTINA

Hewlett-Packard Argentina  
S.A.C.E.I.  
Lavalle 1171 - 3  
Buenos Aires  
Tel: 35-0436, 35-0627, 35-0341  
Telex: 012-1009  
Cable: HEWPACK ARG

## BOLIVIA

Stambuk & Mark (Bolivia) LTDA.  
Av. Mariscal, Santa Cruz 1342  
La Paz  
Tel: 40626, 53163, 52421  
Telex: 3560014  
Cable: BUKMAR

## BRAZIL

Hewlett-Packard Do Brasil  
I.E.C. Ltda.  
Rua Frei Caneca 1119  
01307-Sao Paulo-SP  
Tel: 288-7111, 287-5858  
Telex: 309151/2/3  
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil  
I.E.C. Ltda.  
Praça Dom Feliciano, 78  
90000-Porto Alegre-RS  
Rio Grande do Sul (RS) Brasil  
Tel: 25-8470  
Cable: HEWPACK Porto Alegre

## Hewlett-Packard Do Brasil

I.E.C. Ltda.  
Rua da Matriz, 29  
20000-Rio de Janeiro-GB  
Tel: 266-2643  
Telex: 210079 HEWPACK  
Cable: HEWPACK Rio de Janeiro

## CHILE

Héctor Calcagni y Cia, Ltda.  
Casilla 16.475  
Santiago  
Tel: 423 96  
Cable: CALCAGNI Santiago

## COLOMBIA

Instrumentación  
Henrik A. Langebaek & Kier S.A.  
Carrera 7 No. 48-59  
Aparlado Aéreo 6267  
Bogotá, I.D.E.  
Tel: 45-78-06, 45-55-46  
Cable: AARIS Bogota  
Telex: 444001NSTCO

## COSTA RICA

Lic. Alfredo Gallagos Guerdán  
Aparlado 10159  
San José  
Tel: 21-86-13  
Cable: GALGUR San José

## ECUADOR

Laboratorios de Radio-Ingeniería  
Calle Guayaquil 1246  
Post Office Box 3199  
Quito  
Tel: 212-496; 219-185  
Cable: HORVATH Quito

## EL SALVADOR

Electronic Associates  
Aparlado Postal 1682  
Centro Comercial Gigante  
San Salvador, El Salvador C.A.  
Pasaje Escalón 4849-4\* Piso  
Tel: 23-44-60, 23-32-37  
Cable: ELECAS

## GUATEMALA

IPESA  
Avenida La Reforma 3-48,  
Zona 9  
Guatemala  
Tel: 63627, 64736  
Telex: 4192 TELTRO GU

## MEXICO

Hewlett-Packard Mexicana,  
S.A. de C.V.  
Torres Adalid No. 21, 11° Piso  
Col. del Valle  
Mexico 12, D.F.  
Tel: 543-42-32  
Telex: 017-74-507

## NICARAGUA

Roberto Terán G.  
Apartado Postal 689  
Edificio Terán  
Managua  
Tel: 3451, 3452  
Cable: ROTERAN Managua

## PANAMA

Electrónico Balboa, S.A.  
P.O. Box 4929  
Ave. Manuel Espinosa No. 13-50  
Bldg. Alina  
Panama City  
Tel: 230833  
Telex: 3481103, Curunda,  
Canal Zone  
Cable: ELECTRON Panama City

## PARAGUAY

Z. J. Melamed S.R.L.  
Division: Aparatos y Equipos  
Medicos  
Division: Aparatos y Equipos  
Scientificos y de  
Investigación  
P.O. Box 676  
Chile, 482, Edificio Victoria  
Asuncion  
Tel: 4-5069, 4-6272  
Cable: RAMEL

## PERU

Compañía Electro Médica S.A.  
Ave. Enrique Canaval 312  
San Isidro  
Casilla 1030  
Lima  
Tel: 22-3900  
Cable: ELMED Lima

## PUERTO RICO

San Juan Electronics, Inc.  
P.O. Box 5167  
Ponce de Leon 154  
Pda. 3 PTA de Tierra  
San Juan 00906  
Tel: (809) 725-3342, 722-3342  
Cable: SATRONICS San Juan  
Telex: SATRON 3450 332

## URUGUAY

Pablo Ferrando S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 370  
Montevideo  
Tel: 40-3102  
Cable: RA01UM Montevideo

## VENEZUELA

Hewlett-Packard de Venezuela  
C.A.  
Apartado 50933  
Edificio Segre  
Tercera Transversal  
Los Ruices Norte  
Caracas 107  
Tel: 35-00-11  
Telex: 21146 HEWPACK  
Cable: HEWPACK Caracas

## FOR AREAS NOT LISTED,

CONTACT:  
Hewlett-Packard  
Inter-Americas  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1267  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

## EUROPE

**AUSTRIA**  
Hewlett-Packard Ges.m.b.H  
Handelska 52/3  
P.O. Box 7  
A-1205 Vienna  
Tel: (0222) 33 66 06 to 09  
Cable: HEWPAK Vienna  
Telex: 75923 hewpak a

**BELGIUM**  
Hewlett-Packard Benelux  
S.A./N.V.  
Avenue de Col-Vert, 1,  
(Groenkraaglaan)  
B-1170 Brussels  
Tel: (02) 72 22 40  
Cable: PALOBEN Brussels  
Telex: 23 494 paloben bru

**DENMARK**  
Hewlett-Packard A/S  
Oatavej 38  
DK-3460 Birkerød  
Tel: (01) 81 66 40  
Cable: HEWPAK AS  
Telex: 166 40 hp as

Hewlett-Packard A/S  
Torvet 9  
DK-8600 Silkeborg  
Tel: (06) 82 71-66  
Telex: 166 40 hp as  
Cable: HEWPAK AS

**FINLAND**  
Hewlett-Packard Oy  
Bulevardi 26  
P.O. Box 12185  
SF-00120 Helsinki 12  
Tel: (90) 13730  
Cable: HEWPAK OY Helsinki  
Telex: 12-15363 hel

**FRANCE**  
Hewlett-Packard France  
Quartier de Courtaboeuf  
Boite Postale No. 6  
F-91401 Orsay  
Tel: (1) 907 78 25  
Cable: HEWPAK Orsay  
Telex: 60048

Hewlett-Packard France  
Agence Regionale  
4 Quai des Etoiles  
F-93221 Lyon Cedex 1  
Tel: (78) 42 63 45  
Cable: HEWPAK Lyon  
Telex: 31617

Hewlett-Packard France  
Zone Aéronautique  
Avenue Clement Ader  
F-31770 Colomiers  
Tel: (61) 86 81 55  
Telex: 51957

Hewlett-Packard France  
Agence Regionale  
Boulevard Ferat-Gamara  
Boite Postale No. 11  
F-13100 Luyens  
Tel: (47) 24 00 66  
Telex: 41770

Hewlett-Packard France  
Agence Regionale  
63, Avenue de Rochester  
F-35000 Rennes  
Tel: (99) 36 33 21  
Telex: 74912 F

Hewlett-Packard France  
Agence Regionale  
74, Allée de la Robertsau  
F-67000 Strasbourg  
Tel: (88) 35 23 20/21  
Telex: 89141  
Cable: HEWPAK STRBG

**GERMAN FEDERAL  
REPUBLIC**  
Hewlett-Packard GmbH  
Vertriebszentrale Frankfurt  
Bernersstrasse 117  
Postfach 560 140  
D-6000 Frankfurt 56  
Tel: (0611) 50 04-1  
Cable: HEWPAKSA Frankfurt  
Telex: 41 32 49 fra

Hewlett-Packard GmbH  
Vertriebsbüro Böblingen  
Heinenbergerstrasse 110  
D-7030 Böblingen, Württemberg  
Tel: (07031) 66 72 87  
Cable: HEPAK Böblingen  
Telex: 72 65 739 bbn

Hewlett-Packard GmbH  
Vertriebsbüro Düsseldorf  
Vogelsanger Weg 38  
D-4000 Düsseldorf  
Tel: (0211) 63 80 31/38  
Telex: 85/86 533 hppd d

Hewlett-Packard GmbH  
Vertriebsbüro Hamburg  
Wendenstr. 23  
D-2000 Hamburg 1  
Tel: (040) 24 13 93  
Cable: HEWPAKSA Hamburg  
Telex: 21 63 032 hphd d

Hewlett-Packard GmbH  
Vertriebsbüro Hannover  
Mollendorfer Strasse No. 11  
D-3000 Hannover-Kleefeld  
Tel: (0511) 55 06 26  
Telex: 41770

Hewlett-Packard GmbH  
Vertriebsbüro Nürnberg  
Hersbruckerstrasse 42  
D-8500 Nürnberg  
Tel: (0911) 57 10 66  
Telex: 623 860

Hewlett-Packard GmbH  
Vertriebsbüro München  
Unterhachinger Strasse 28  
ISAR Center  
D-8012 Ottobrunn  
Tel: (089) 601 30 61/7  
Telex: 52 49 85  
Cable: HEWPAKSA München

(West Berlin)  
Hewlett-Packard GmbH  
Vertriebsbüro Berlin  
Wilmsdorfer Strasse 113/114  
D-1000 Berlin W. 12  
Tel: (030) 3137046  
Telex: 18 34 05 hpbnd d

**GREECE**  
Kostas Karayannis  
18, Ermou Street  
GR-Athens 126  
Tel: 8080337, 8080359,  
8080429, 8018693  
Cable: RAKAR Athens  
Telex: 21 59 62 rkar gr  
Hewlett-Packard S.A.  
Mediterranean & Middle East  
Operations  
35 Kolokotroni Street  
Platia Kefalliarion  
Gr-Kifissia Athens  
Tel: 8080337, 8080358,  
8080429, 8018693

**IRELAND**  
Hewlett-Packard Ltd.  
224 Bath Road  
GB-Slough, SL1 4 DS, Bucks  
Cable: HEWPIE Slough  
Telex: 848413

Hewlett-Packard Ltd.  
The Graftons  
Stamford New Road  
Altrincham, Cheshire  
Tel: (061) 928-9021  
Telex: 668068

**ITALY**  
Hewlett-Packard Italiana S.p.A.  
Via Amerigo Vespucci 2  
I-20124 Milan  
Tel: (2) 6251 (10 lines)  
Cable: HEWPAKIT Milan  
Telex: 32046

Hewlett-Packard Italiana S.p.A.  
Vicolo Pastori, 3  
I-35100 Padova  
Tel: (49) 66 40 62  
Telex: 32046 via Milan

Hewlett-Packard Italiana SPA  
Via Medaglie d'Oro, 2  
I-56100 Pisa  
Tel: (050) 500022

Hewlett-Packard Italiana S.p.A.  
Via Colli, 24  
I-10129 Turin  
Tel: (11) 53 82 64  
Telex: 32046 via Milan

**LUXEMBURG**  
Hewlett-Packard Benelux  
S.A./N.V.  
Avenue de Col-Vert, 1,  
(Groenkraaglaan)  
B-1170 Brussels  
Tel: (03/02) 72 22 40  
Cable: PALOBEN Brussels  
Telex: 23 494

**NETHERLANDS**  
Hewlett-Packard Benelux/N.V.  
Weerdestein 117  
P.O. Box 7825  
NL-Amsterdam, 1011  
Tel: 5411522  
Cable: PALOBEN Amsterdam  
Telex: 13 216 hepa nl

**NORWAY**  
Hewlett-Packard Norge A/S  
Nobelsgt. 13  
Box 149  
N-1344 Nasim  
Tel: (02) 53 83 60  
Telex: 16621 honas n

**PORTUGAL**  
Teletra-Empresa Técnica de  
Equipamentos Eléctricos S.a.r.l.  
Rua Rodrigo da Fonseca 103  
P.O. Box 2531  
P-Lisbon 1  
Tel: (01) 68 60 72  
Cable: TELETRA Lisbon  
Telex: 1598

**SPAIN**  
Hewlett-Packard Española, S.A.  
Jerez No 8  
E-Madrid 16  
Tel: 458 26 00  
Telex: 23515 hpe

Hewlett-Packard Española, S.A.  
Milanesado 21-23  
E-Barcelona 17  
Tel: (3) 203 62 00  
Telex: 52603 hpbe e

Hewlett-Packard Espanola S.A.  
Av Ramon y Cajal, 1, planta "9"  
E-Seville

**SWEEN**  
Hewlett-Packard Sverige AB  
Enghetsvägen 1-3  
Fack  
S-161 20 Bromma 20  
Tel: (08) 730 0550  
Cable: MEASUREMENTS  
Stockholm  
Telex: 10721

Hewlett-Packard Sverige AB  
Hagakergatan 9C  
S-431 41 Mölndal  
Tel: (031) 27 68 00/01  
Telex: Via Bromma

**SWITZERLAND**  
Hewlett-Packard (Schweiz) AG  
Zürcherstrasse 20  
P.O. Box 64  
CH-8952 Schlieren Zurich  
Tel: (01) 98 18 21/24  
Cable: HPAG CH  
Telex: 53933 hpag ch

Hewlett-Packard (Schweiz) AG  
9, Chemin Louis-Pictet  
CH-1214 Vernier—Geneva  
Tel: (022) 41 4950  
Cable: HEWPAKSA Geneva  
Telex: 27 333 hpsa ch

**TURKEY**  
Telekom Engineering Bureau  
Saglik Sok No. 15/1  
Ayaspaşa Beyoğlu  
P.O. Box 437 Beyoğlu  
TR-Istanbul  
Tel: 49 40 40  
Cable: TELEMATIOM Istanbul

**UNITED KINGDOM**  
Hewlett-Packard Ltd.  
224 Bath Road  
GB-Slough, SL1 4 DS, Bucks  
Tel: Slough (0753) 33341  
Cable: HEWPIE Slough  
Telex: 848413

Hewlett-Packard Ltd.  
"The Graftons"  
Stamford New Road  
GB-Altrincham, Cheshire  
Tel: (061) 928-9021  
Telex: 668068

Hewlett-Packard, Ltd.  
c/o Makro  
South Service Wholesale Centre  
Amber Way  
Halesowen Industrial Estate  
GB-Worcs.  
Tel: Birmingham 7860

Hewlett-Packard Ltd.'s registered  
address for V.A.T. purposes  
only:  
70, Finsbury Pavement  
London, EC2A1 5X  
Registered No: 690597

**SOCIALIST COUNTRIES  
PLEASE CONTACT:**  
Hewlett-Packard Ges.m.b.H.  
Handelska 52/3  
P.O. Box 7

A-1205 Vienna  
Ph: (0222) 33 66 06 to 09  
Cable: HEWPAK Vienna  
Telex: 75923 hewpak a

**ALL OTHER EUROPEAN  
COUNTRIES CONTACT:**  
Hewlett-Packard S.A.  
Rue du Bois-du-Lan 7  
P.O. Box 85  
CH-1217 Meyrin 2 Geneva  
Switzerland  
Tel: (022) 41 54 00  
Cable: HEWPAKSA Geneva  
Telex: 2 24 86

## AFRICA, ASIA, AUSTRALIA

**ANGOLA**  
Teletra-Empresa Técnica  
de Equipamentos Eléctricos  
SARL  
Rua de Barbosa, Rodrigues,  
42.1°, 01°  
P.O. Box 6487  
Luanda  
Cable: TELETRA Luanda

**AUSTRALIA**  
Hewlett-Packard Australia  
Pty. Ltd.,  
31-51 Joseph Street  
Victoria, 3130  
Tel: 89 6351  
Cable: HEWPAK Melbourne  
Telex: 31 024

Hewlett-Packard Australia  
Pty. Ltd.,  
31 Bridge Street  
Pymble,  
New South Wales, 2073  
Tel: 449 6566  
Cable: HEWPAK Sydney

Hewlett-Packard Australia  
Pty. Ltd.,  
97 Churchill Road  
Prospect 5082  
South Australia  
Tel: 44 8151  
Cable: HEWPAK Adelaide

Hewlett-Packard Australia  
Pty. Ltd.,  
Casablanca Buildings  
196 Adelaide Terrace  
Perth, W.A. 6000  
Tel: 25 6800  
Cable: HEWPAK Perth

Hewlett-Packard Australia  
Pty. Ltd.,  
10 Woolley Street  
P.O. Box 191  
Dickson A.C.T. 2602  
Tel: 49 8194  
Cable: HEWPAK Canberra ACT

Hewlett-Packard Australia  
Pty. Ltd.,  
2nd Floor, 49 Gregory Terrace  
Brisbane, Queensland, 4000  
Tel: 29 1544

**CEYLON**  
United Electricals Ltd.  
P.O. Box 681  
60, Park St.  
Colombo 2  
Tel: 26696  
Cable: HOTPOINT Colombo

**CYPRUS**  
Kypronic  
19 Gregorios & Xenopoulos Road  
P.O. Box 1152  
CY-Nicosia  
Tel: 45628/29  
Cable: KYPRONICS PANDEHIS

**ETHIOPIA**  
African Salespower & Agency  
Private Ltd., Co.  
P.O. Box 718  
58/59 Cunningham St.  
Addis Ababa  
Tel: 12285  
Cable: ASACO Addisababa

**HONG KONG**  
Schmidt & Co. (Hong Kong) Ltd.  
P.O. Box 297  
Connaught Centre  
39th Floor  
Connaught Road, Central  
Hong Kong  
Tel: 240168, 232735  
Telex: HK4766  
Cable: SCHMIOTCO Hong Kong

**INDIA**  
Blue Star Ltd.  
Kasturi Buildings  
Jamshedji Tata Rd.  
Bombay 400 020  
Tel: 29 50 21  
Telex: 3751  
Cable: BLUEFROST

Blue Star Ltd.  
Sahas  
414/2 Vir Savarkar Marg  
Prabhadevi  
Bombay 400 025  
Tel: 45 78 87  
Telex: 4093  
Cable: FROSTBLUE

Blue Star Ltd.  
Band Box House  
Prabhadevi  
Bombay 400 025  
Tel: 45 73 01  
Telex: 3751  
Cable: BLUESTAR

Blue Star Ltd.  
14/40 Civil Lines  
Kampur 208 001  
Tel: 6 88 82  
Cable: BLUESTAR

Blue Star, Ltd.  
7 Hare Street  
P.O. Box 506  
Calcutta 700 001  
Tel: 23 0131  
Telex: 655  
Cable: BLUESTAR

Blue Star Ltd.  
Blue Star House,  
34 Ring Road  
Lajpat Nagar  
New Delhi 110 024  
Tel: 62 32 76  
Telex: 2463  
Cable: BLUESTAR

Blue Star, Ltd.  
Blue Star House  
11/11A Magarath Road  
Bangalore 560 025  
Tel: 23 0131  
Telex: 430  
Cable: BLUESTAR

Blue Star, Ltd.  
1-11/17-1  
Sarajini Devi Road  
Secunderabad 500 003  
Tel: 7 63 91, 7 73 93  
Cable: BLUEFROST  
Telex: 459

Blue Star, Ltd.  
23/24 Second Line Beach  
Madras 600 001  
Tel: 23954  
Telex: 379  
Cable: BLUESTAR

Blue Star, Ltd.  
Nathraj Mansions  
2nd Floor Bistupur  
Jamshedpur 831 001  
Tel: 38 04  
Cable: BLUESTAR  
Telex: 240

**INDONESIA**  
Bah Bolen Trading Coy. N.V.  
Djalah Merdeka 29  
Bandung  
Tel: 4915; 51560  
Cable: ILMU  
Telex: 08-809

**IRAN**  
Multi Corp International Ltd.  
Avenue Soraya 130  
P.O. Box 1212  
IR-Teheran  
Tel: 83 10 35-39  
Cable: MULTICORP Teheran  
Telex: 2893 MCI TN

**ISRAEL**  
Electronics & Engineering  
Div. of Motorola Israel Ltd.  
17 Aminadav Street  
Tel-Aviv  
Tel: 36941 (3 lines)  
Cable: BASTEL Tel-Aviv  
Telex: 33569

**JAPAN**  
Yokogawa-Hewlett-Packard Ltd.  
Ohashi Building  
1-59-1 Yoyogi  
Shibuya-ku, Tokyo  
Tel: 03-370-2281/92  
Telex: 232-2024YHP  
Cable: YHPMARKET TOK 23-724

Yokogawa-Hewlett-Packard Ltd.  
Nisei Ibaragi Bldg.  
2-2-8 Kasuga  
Ibaragi-Shi  
Osaka  
Tel: (0726) 23-1641  
Telex: 5332-385 YHP OSAKA

Yokogawa-Hewlett-Packard Ltd.  
Nakamo Building  
No. 24 Kamisazasima-cho  
Nakamura-ku, Nagaya City  
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd.  
Nitto Bldg.  
2-4-2 Shinohara-Kita  
Kohoku-ku  
Yokohama 222  
Tel: 045-432-1504  
Telex: 382-3204 YHP YOK

Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg.  
Rm. 603, 3  
2-Ghime  
IZUMI-CHO,  
Mito, 310  
Tel: 0292-25-7470

**KENYA**  
Kenya Kinetics  
P.O. Box 18311  
Hairbell, Kenya  
Tel: 57726  
Cable: PROTON

**KOREA**  
American Trading Company  
Korea,  
I.P.O. Box 1103  
Dae Kyung Bldg., 8th Floor  
107 Sejong-Ro,  
Chongro-Ku, Seoul  
Tel: (4 lines) 73-8924-7  
Cable: AMTRACO Seoul

**LEBANON**  
Constantin E. Macridis  
P.O. Box 7213  
RL-Beirut  
Tel: 220846  
Cable: ELECTRONUCLEAR Beirut

**MALAYSIA**  
MECOMB Malaysia Ltd.  
2 Lorong 13/6A  
Section 13  
Petaling Jaya, Selangor  
Cable: MECOMB Kuala Lumpur

**MOZAMBIQUE**  
A.N. Gonçalves, Lda.  
162, Av. D. Luis  
62, Av. D. Luis  
Lorenzo Marques  
Tel: 27091, 27114  
Telex: 6-203 Negon Mo  
Cable: NEGON

**NEW ZEALAND**  
Hewlett-Packard (N.Z.) Ltd.  
94-96 Oixon Street  
P.O. Box 9443  
Courtenay Place,  
Wellington  
Tel: 59-559  
Telex: 3898  
Cable: HEWPAK Wellington

Hewlett-Packard (N.Z.) Ltd.  
Pakuranga Professional Centre  
267 Pakuranga Highway  
Box 51092  
Pakuranga  
Tel: 569-651  
Cable: HEWPAK, Auckland

**NIGERIA**  
The Electronics Instrumenta-  
tions Ltd. (TEIL)  
144 Agege Motor Rd., Mushin  
P.O. Box 6645  
Lagos  
Cable: THEITEIL Lagos

The Electronics Instrumenta-  
tions Ltd. (TEIL)  
16th Floor Cocoa House  
P.M.B. 5402  
Ibadan  
Tel: 22325  
Cable: THEITEIL Ibadan

**PAKISTAN**  
Mushko & Company, Ltd.  
Osman Chambers  
Abdullah Haroon Road  
Karachi 3  
Tel: 511027, 512927  
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.  
38B, Satellite Town  
Rawalpindi  
Tel: 41924  
Cable: FEMUS Rawalpindi

**PHILIPPINES**  
Electromex, Inc.  
6th Floor, Almagamated  
Development Corp. Bldg.  
Ayala Avenue, Makati, Rizal  
C.C.P.O. Box 1028  
Makati, Rizal  
Tel: 86-187, 87-76-77,  
87-86-88, 87-18-45, 88-91-71,  
83-81-12, 83-82-12  
Cable: ELEMEX Manila

**SINGAPORE**  
Mechanical & Combustion  
Engineering Company Pte.,  
Ltd.  
10/12, Jalan Kilang  
Red Hill Industrial Estate  
Singapore, 3  
Tel: 647151 (7 lines)  
Cable: MECOMB Singapore

Hewlett-Packard Far East  
Area Office  
P.O. Box 87  
Alexandra Post Office  
Singapore 3  
Tel: 633022  
Cable: HEWPAK SINGAPORE

**SOUTH AFRICA**  
Hewlett-Packard South Africa  
(Pty.), Ltd.  
Daphne Street, Wendywood,  
Sandton, Transvaal 2001  
Tel: 407641 (five lines)

Hewlett-Packard South Africa  
(Pty.), Ltd.  
Breechale House  
Bree Street  
Cape Town  
Tel: 2 6941/2/3  
Cable: HEWPAK Cape Town  
Telex: 0008 CT

Hewlett-Packard South Africa  
(Pty.), Ltd.  
641 Ridge Road, Oorban  
P.O. Box 99  
Overport, Natal  
Tel: 88-6102  
Telex: 567954  
Cable: HEWPAK

**TAIWAN**  
Hewlett-Packard Taiwan  
39 Chung Shiao West Road  
Sec. 1  
Overseas Insurance  
Corp. Bldg. 7th Floor  
Taipei  
Tel: 389160, 1-2, 375121,  
Ext. 240 249  
Telex: TP824 HEWPAK  
Cable: HEWPAK Taipei

**THAILAND**  
UNIMESA Co., Ltd.  
Chongkoinsee Building  
56 Suriwongse Road  
Bangkok  
Tel: 37956, 31300, 31307,  
37540  
Cable: UNIMESA Bangkok

**UGANDA**  
Uganda Tele-Electric Co., Ltd.  
P.O. Box 4449  
Kampala  
Tel: 57279  
Cable: COMCO Kampala

**VIETNAM**  
Peninsular Trading Inc.  
P.O. Box H-3  
216 Hien-Vuong  
Saigon  
Tel: 20 805, 93398  
Cable: PENTRA, SAIGON 242

**ZAMBIA**  
R. J. Tilbury (Zambia) Ltd.  
P.O. Box 2792  
Lusaka  
Zambia, Central Africa  
Tel: 73793  
Cable: ARJAYTEE, Lusaka

**MEDITERRANEAN AND  
MIDDLE EAST COUNTRIES  
NOT SHOWN PLEASE  
CONTACT:**

Hewlett-Packard S.A.  
Mediterranean & Middle East  
Operations  
35 Kolokotroni Street  
Platia Kefalliarion  
Gr-Kifissia Athens  
Tel: 8080337, 8080358,  
8080429, 8018693

**OTHER AREAS NOT  
LISTED, CONTACT:**  
Hewlett-Packard  
Export Trade Company  
3200 Hillview Ave.  
Palo Alto, California 94304  
Tel: (415) 493-1501  
TWX: 910-373-1267  
Cable: HEWPAK Palo Alto  
Telex: 034-8300, 034-8493



## CERTIFICATION

*The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.*

